


EK-Quantum Reflection Fractal ATX D5 PWM D-RGB – Plexi

DISTRIBUTION PLATE

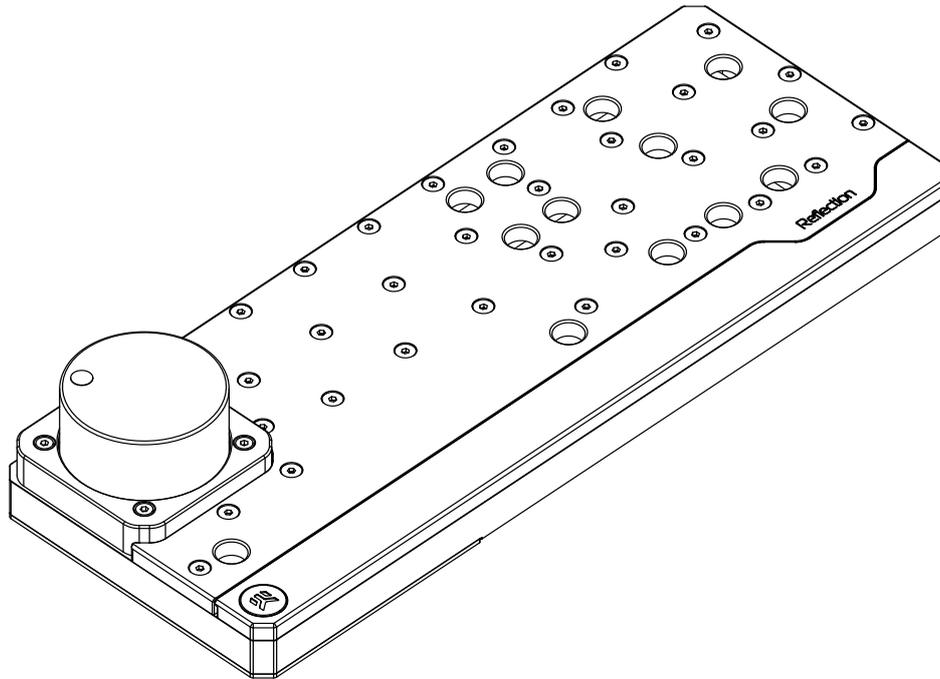

Before you start using this product please follow these basic guidelines:

Please carefully read the manual before beginning with the installation process!


The EK Fittings require only a small amount of force to screw them firmly in place since the liquid seal is ensured by the rubber O-ring gaskets.

The use of corrosion inhibiting coolants is always recommended for any liquid cooling system. EKWB recommends any of the EK Cryofuel for worry-free usage.


TABLE OF CONTENT

BOX CONTENTS	4
DISTRIBUTION PLATE DIMENSIONS	5
TECHNICAL SPECIFICATIONS AND PRODUCT PARTS	6
PREPARING THE DEFINE R6/VECTOR RS	7
INSTALLING THE DISTRIBUTION PLATE IN THE DEFINE R6/VECTOR RS	9
PREPARING THE DEFINE S2/MESHIFY S2	10
INSTALLING THE DISTRIBUTION PLATE IN THE DEFINE S2/MESHIFY S2	11
PREPARING THE DEFINE 7/7 XL	12
INSTALLING THE DISTRIBUTION PLATE IN THE DEFINE 7/7 XL	12
RECOMMENDED DISTRIBUTION PLATE CONFIGURATIONS	13
CONFIGURATION WITH ONLY TOP RADIATOR	13
CONFIGURATION WITH BOTH RADIATORS	14
CONNECTING THE D-RGB LED STRIP	15
CONNECTING THE PUMP	16
CONNECTING THE PUMP - MOLEX CONNECTOR	16
CONNECTING THE PUMP - SATA CONNECTOR	16
TESTING THE LOOP	17
SUPPORT AND SERVICE	18
SOCIAL MEDIA	18


BOX CONTENTS

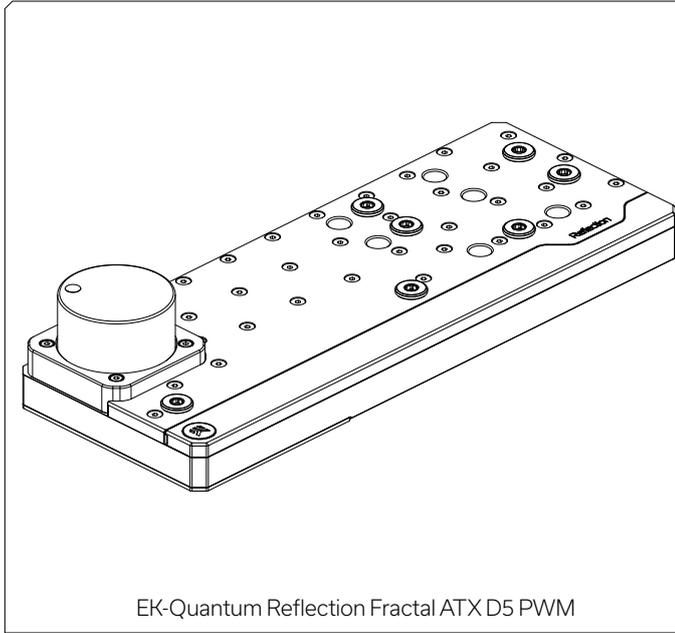


Mounting Mechanism – You may not need every screw from this package. EAN: 102555

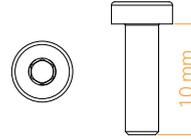


M3 x 10 DIN7984 Screw (6 pcs)

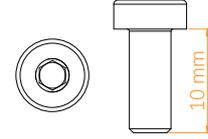


M4 x 10 DIN7984 Screw (1 pc)

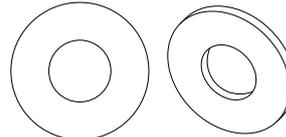

M3 Metal Washer (6 pcs)


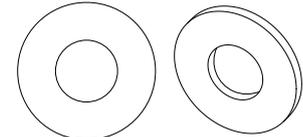


PVC Washer M4 (1 pc)

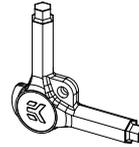


EK-Loop Multi Allen Key (1 pc)

DISTRIBUTION PLATE DIMENSIONS

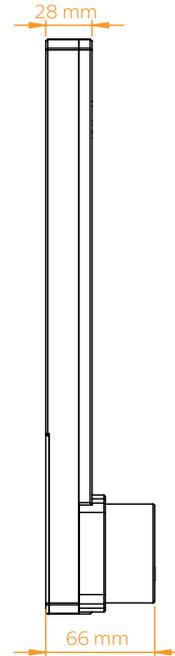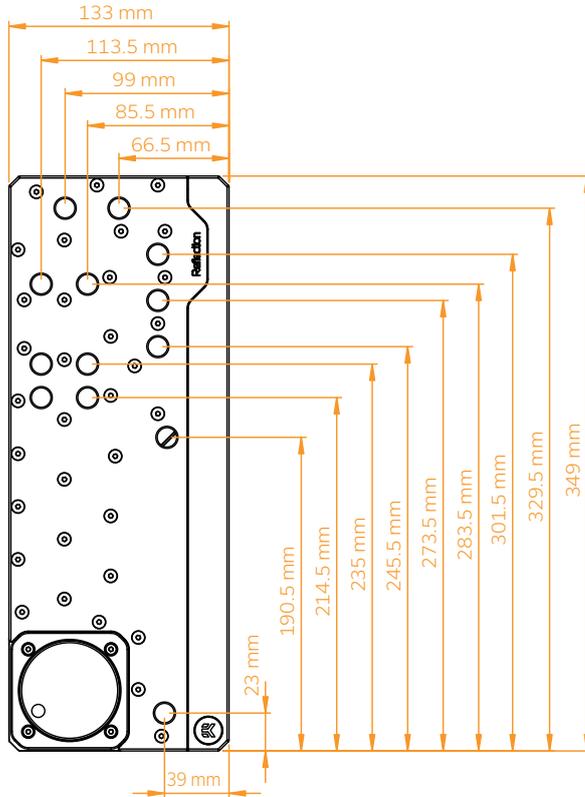

TECHNICAL SPECIFICATIONS AND PRODUCT PARTS

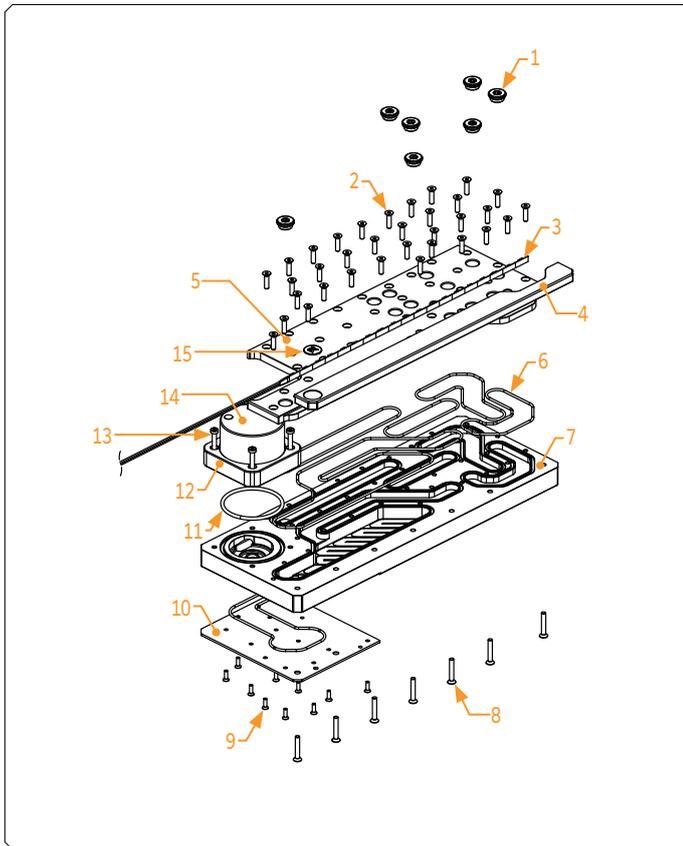


Position	EAN	Description	Quantity
1	102639	EK-Plug G1/4	7
2	8312	M4 x 16 DIN7991 Screw	34
3	100815	LED Strip	1
4	103277	LED Strip cover	1
5	102124	Top plexi plate	1
6	102225	OR Set	1
7	102123	Bottom plexi plate	1
8	9051	M4 x 25 DIN7991 Screw	7
9	8201	M3 x 10 7991DIN Screw	14
10	102126	Metal backplate	1
11	5154	OR 52 x 3	1
12	101803	Pump holder	1
13	8311	M4 x 20 DIN7984 Screw	4
14	383110987597	D5 Pump	1
15	100663	EK Badge	1

PREPARING THE DEFINE R6/VECTOR RS

Before installing the distribution plate, carefully read the PC case manual.


STEP 1

Remove the both side panels and the front panel from the case.

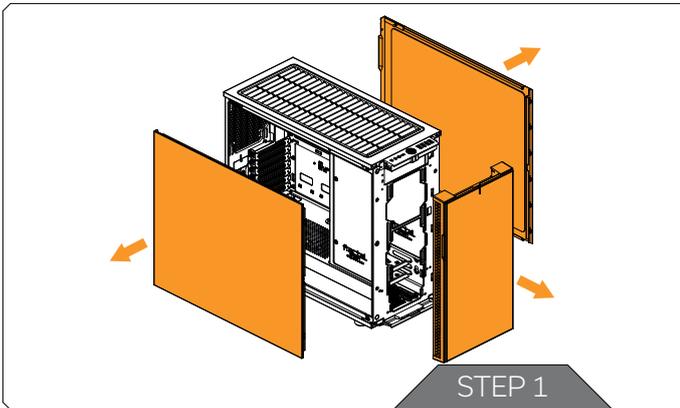


STEP 2

Remove the top filter frame and follow the process in the Fractal Design R6 case manual to remove all drive mounts and re-position the drive cover to the back of the case.

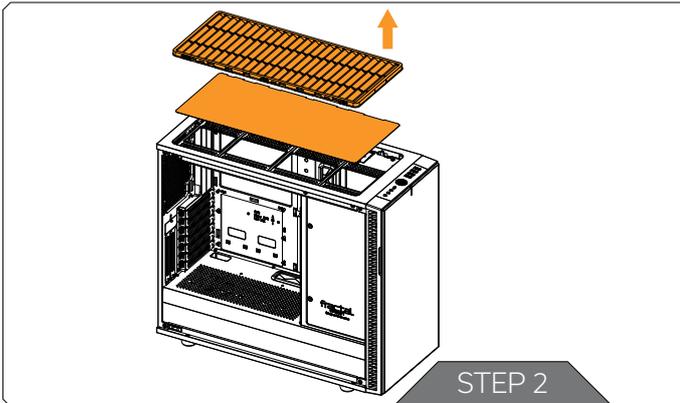


STEP 3

Unscrew two (2) encircled screws and use the marked holes for distribution plate mounting screws.

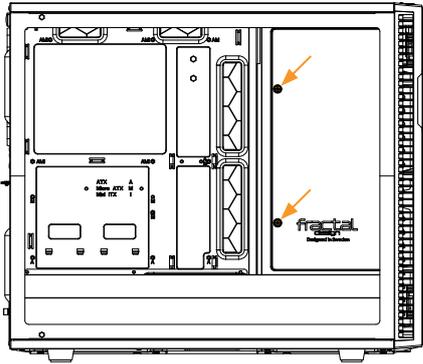


STEP 3

You can also remove the drive cover in order to secure the distribution plate with additional mounting screws if required.

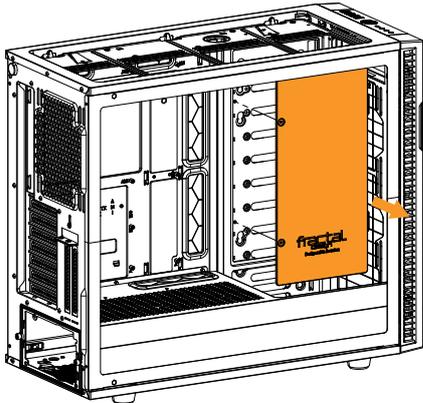


INSTALLING THE DISTRIBUTION PLATE IN THE DEFINE R6/VECTOR RS

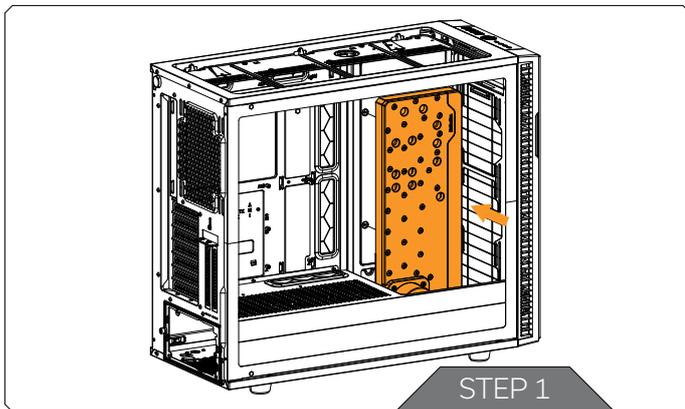

STEP 1

Carefully place the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB – Plexi distribution plate into the PC case. Make sure that mounting holes are aligned.

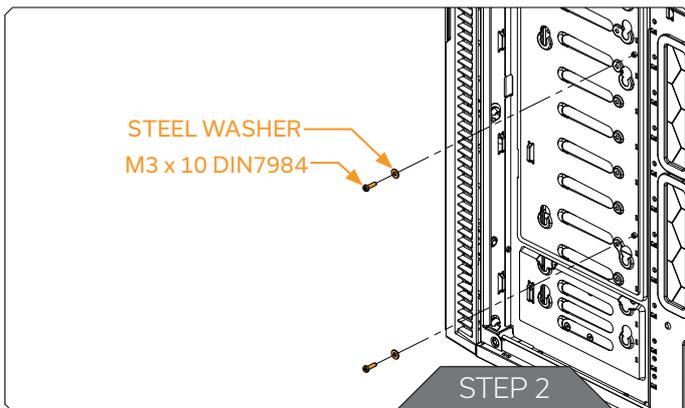

STEP 2


Secure the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB – Plexi distribution plate with two M3 x 10 7984DIN screws and steel washers.

PREPARING THE DEFINE S2/MESHIFY S2

Before installing the distribution plate, carefully read the PC case manual.


STEP 1

Remove the both side panels from the case.

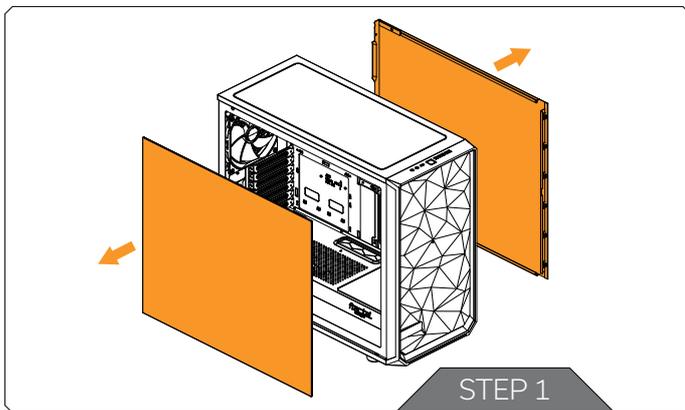


STEP 2

Remove the hard drive cage. It can be reused, after installing EK-Quantum Reflection Fractal ATX D5 PWM D-RGB - Plexi distribution plate.

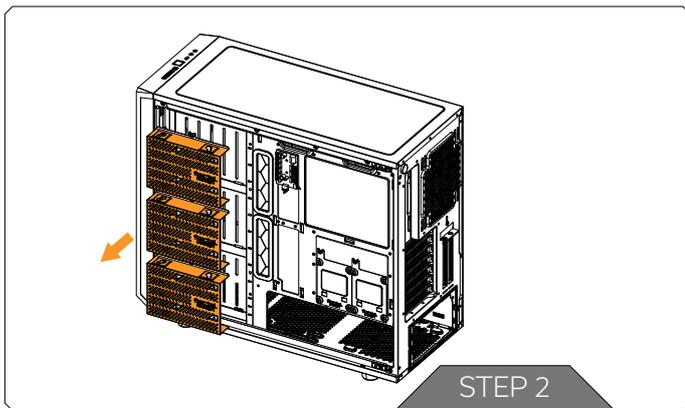


INSTALLING THE DISTRIBUTION PLATE IN THE DEFINE S2/MESHIFY S2

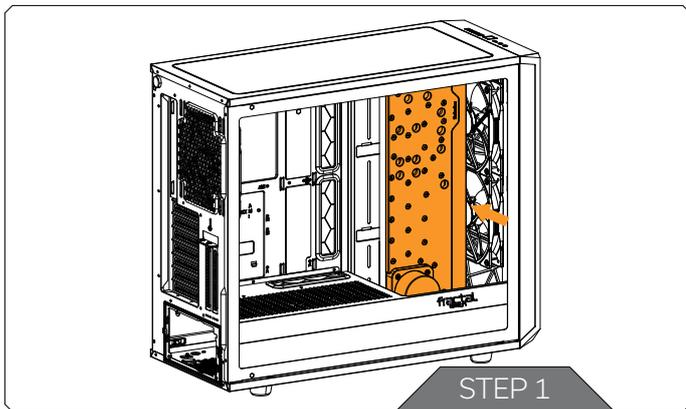

STEP 1


Carefully place the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB – Plexi distribution plate into the PC case. Make sure that mounting holes are aligned.

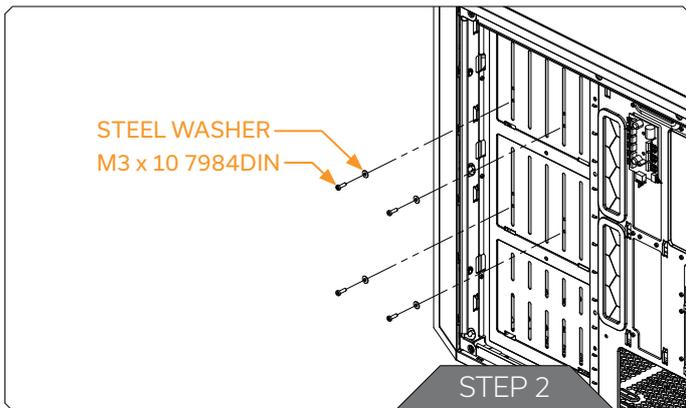

STEP 2

Secure the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB – Plexi distribution plate with enclosed M3 X 10 7984DIN mounting screws and steel washers.


PREPARING THE DEFINE 7/7 XL

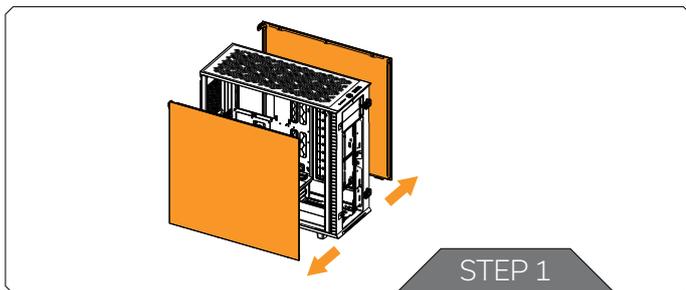

First take off the both side panels from the case.

Factory provided fans, drive cover and drive cages also need to be removed in order to install the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB - Plexi distribution plate.

INSTALLING THE DISTRIBUTION PLATE IN THE DEFINE 7/7 XL

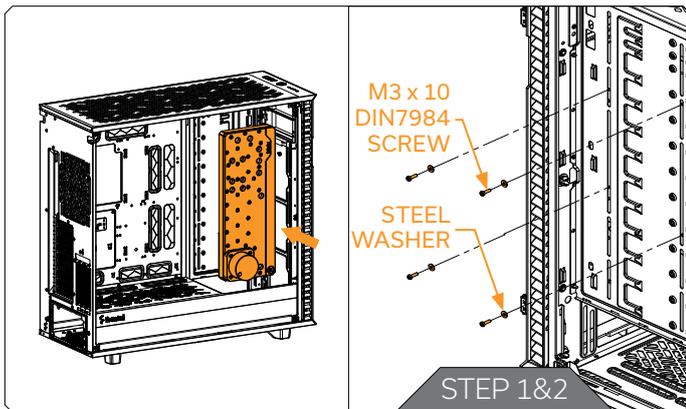

STEP 1

Carefully place the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB - Plexi distribution plate into the PC case. Make sure that mounting holes are aligned.


STEP 2

Secure the EK-Quantum Reflection Fractal ATX D5 PWM D-RGB - Plexi distribution plate with M3 x 10 7984DIN screws and steel washers.

RECOMMENDED DISTRIBUTION PLATE CONFIGURATIONS


CONFIGURATION WITH ONLY TOP RADIATOR

All remaining and unused ports should be closed using the supplied plugs and an EK-Loop Multi Allen Key (6mm, 8mm, 9mm).

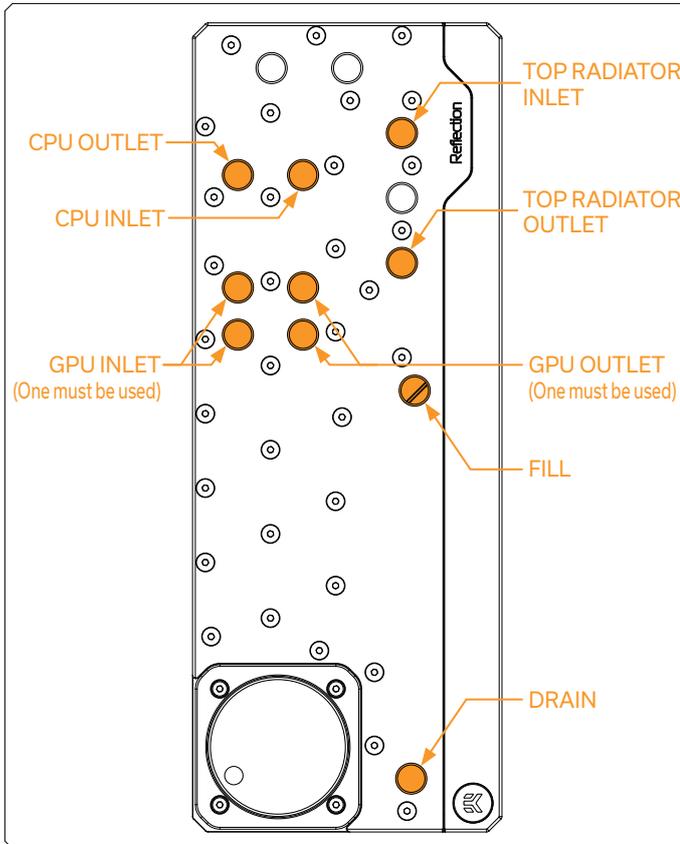


CONFIGURATION WITH BOTH RADIATORS

All remaining and unused ports should be closed using the supplied plugs and an EK-Loop Multi Allen Key (6mm, 8mm, 9mm).

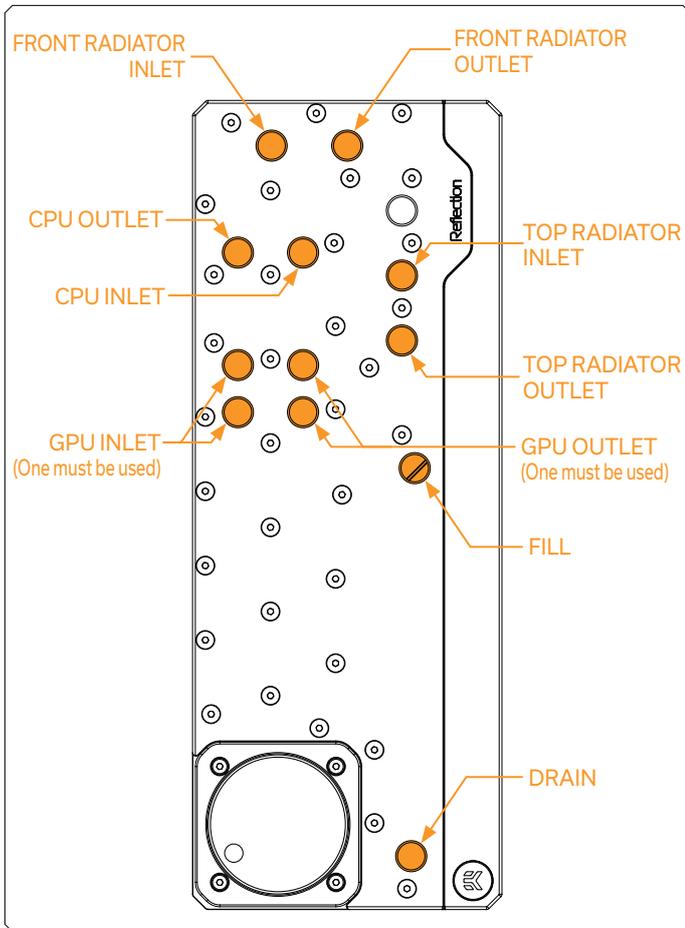

CONNECTING THE D-RGB LED STRIP

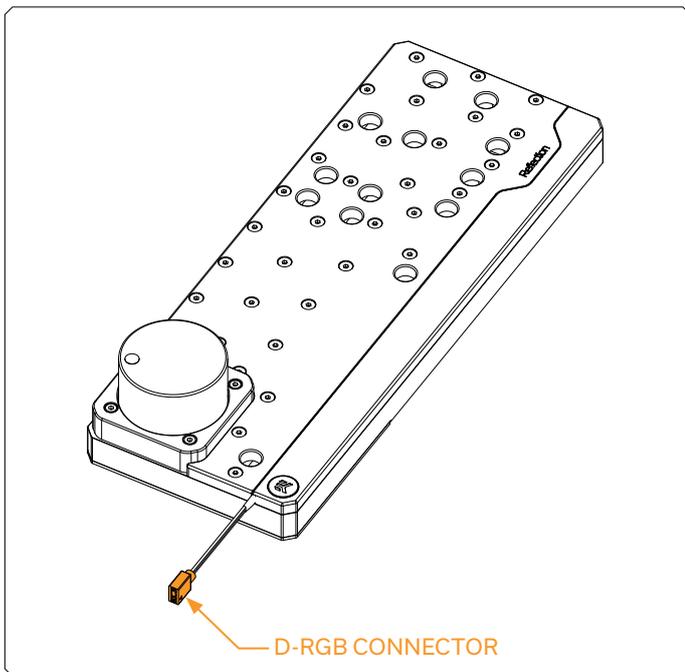


Plug the 3-pin connector of the distribution plate D-RGB LED light to the D-RGB HEADER on the motherboard. The LED will work if the pin layout on the header is as follows: +5V, Digital, Empty, Ground.



Please ensure that the arrow indicated on the connector is plugged into the +5V line as indicated on your motherboard. If you put LED Diode to the 12V RGB HEADER you can damage the LEDs.

Connector is the same on D-RGB and RGB versions, but D-RGB version has 3 cables from connector to PCB; RGB version has 4 cables. If you connect D-RGB led to ordinary RGB header you can damage your motherboard or LED strip.


CONNECTING THE PUMP

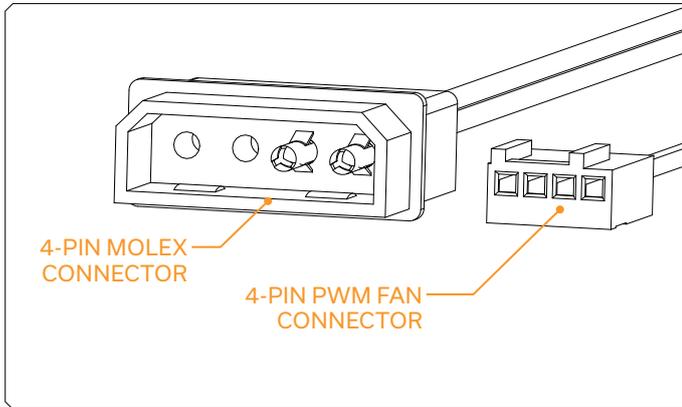

CONNECTING THE PUMP - MOLEX CONNECTOR

The EK-D5 PWM pump has two connectors.

1. **MOLEX Connector:** It must be connected directly to your PSU at all times as it is used to power the pump.
2. **4-pin PWM fan:** It can be connected to your motherboard's CPU_Fan or designated water pump header. It can also be connected to a controller. This cable is used to control and report the rotational speed of the pump. If it's not connected, the pump will run at maximum speed (100% PWM).

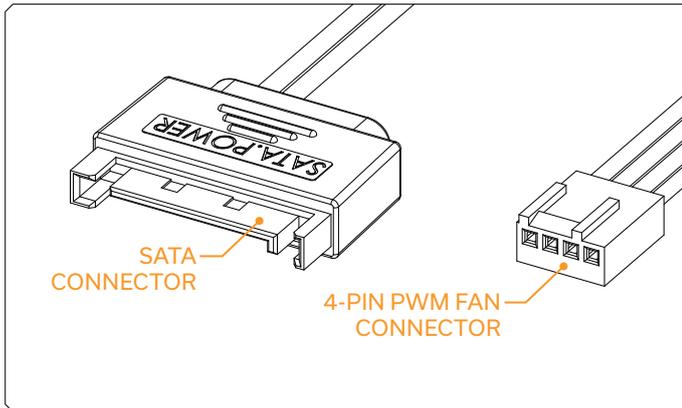

CONNECTING THE PUMP - SATA CONNECTOR

The EK-D5 PWM pump has two connectors.

1. **SATA Connector:** It must be connected directly to your PSU at all times as it is used to power the pump.
2. **4-pin PWM fan:** It can be connected to your motherboard's CPU_Fan or designated water pump header. It can also be connected to a controller. This cable is used to control and report the rotational speed of the pump. If it's not connected, the pump will run at maximum speed (100% PWM).

TESTING THE LOOP

To make sure the installation of EK components was successful, we recommend you perform a leak test for 24 hours.

When your loop is complete and filled with coolant, connect the pump to a PSU outside of your system. Do not connect power to any of the other components. Turn on the PSU and let the pump run continuously. It is normal for the coolant level to drop during this process as air collects in the distribution plate.

Inspect all parts of the loop, and in the eventuality that coolant leaks, fix the issue and repeat the testing process. Ensure that all hardware is dry before the system is powered on in order to prevent any damage.

SUPPORT AND SERVICE

In case you need assistance or wish to order spare parts or a new mounting mechanism, please contact:

<https://www.ekwb.com/customer-support/>

For spare parts orders, refer to the page with "TECHNICAL SPECIFICATIONS AND PRODUCT PARTS" where you can find the EAN number of each part you might need.

Include the EAN number with quantity in your request. Mounting Mechanism EAN can be found under "BOX CONTENTS"

Thermal pads are readily available in the EK shop

SOCIAL MEDIA

 EKWaterBlocks

 @EKWaterBlocks

 ekwaterblocks

 EKWBofficial

 ekwaterblocks

