
EK-Loop Angled Bracket – 140/120 mm

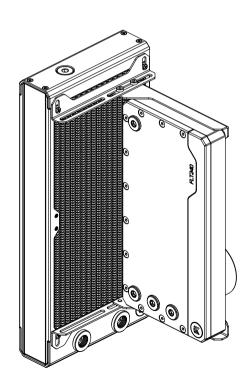



This product is intended for installation by expert users only. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment. EK Water Blocks assumes no liability whatsoever, expressed or implied, for the use of these products, nor their installation. The following instructions are subject to change without notice. Please visit our web site at www.ekwb.com for updates. Before installation, please read important notice, disclosure, and warranty conditions printed on the back of the box.

Before you start using this product please follow these basic guidelines:

Please, read the manual carefully before you begin with the installation process!

EK-Loop Angled Bracket - 140/120mm is compatible with EK-Quantum Kinetic FLT and EK-Quantum Volume FLT units.

TABLE OF CONTENT

ASSEMBLING THE EK-LOOP ANGLED BRACKET INSTALLING THE EK-LOOP ANGLED BRACKET DIRECTLY INTO THE CASE INSTALLING THE EK-LOOP ANGLED BRACKET ONTO THE RADIATOR ATTACHING THE RESERVOIR TO THE EK-LOOP ANGLED BRACKET ATTACHING THE FITTINGS SUPPORT AND SERVICE	OX CONTENTS
INSTALLING THE EK-LOOP ANGLED BRACKET ONTO THE RADIATOR ATTACHING THE RESERVOIR TO THE EK-LOOP ANGLED BRACKET ATTACHING THE FITTINGS SUPPORT AND SERVICE	SSEMBLING THE EK-LOOP ANGLED BRACKET
INSTALLING THE EK-LOOP ANGLED BRACKET ONTO THE RADIATOR ATTACHING THE RESERVOIR TO THE EK-LOOP ANGLED BRACKET ATTACHING THE FITTINGS SUPPORT AND SERVICE	NSTALLING THE EK-LOOP ANGLED BRACKET DIRECTLY INTO THE CASE
ATTACHING THE FITTINGS 9	
CURRORT AND CERVICE	TTACHING THE RESERVOIR TO THE EK-LOOP ANGLED BRACKET
CUDDODT AND CEDVICE	TTACHING THE FITTINGS
SUPPORT AND SERVICE 10	UPPORT AND SERVICE 10
SOCIAL MEDIA 10	OCIAL MEDIA 10

BOX CONTENTS

M4 x 4 Screws DIN 7984 (4 pcs)	M4 x 10 Screws DIN 7984 (8 pcs)	Acetal Standoffs (4 pcs)
M4 Nuts (4 pcs)	Allen Key 2.5mm	M4 Steel Washers (4 pcs)
EK-Loop Angled Bracket Base - 140 (2 pcs) (107030)	EK-Loop Angled Bracket - 120 - left part (105996)	EK-Loop Angled Bracket - 120 - right part (105995)


ASSEMBLING THE EK-LOOP ANGLED BRACKET



EK-Loop Angled Bracket base piece has four slot holes that allow adjustability. Larger slot holes will enable adjusting of the bracket's position (63 mm on each side). Side pieces can be screwed into the base through one of the slots or both of them.




Smaller slot holes on the side allow for adjusting the position of the bracket on the radiator.

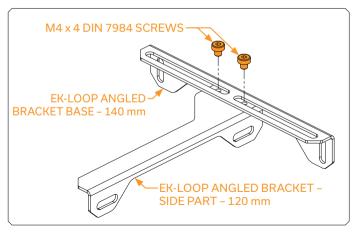

For the assembly of the EK-Loop Angled Bracket – 140/120 mm, use M4 x 4 DIN 7984 screws (as shown in the picture). Side parts already have threaded holes, so there is no need for additional washers and nuts.

INSTALLING THE EK-LOOP ANGLED BRACKET DIRECTLY INTO THE CASE

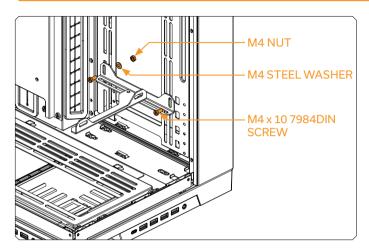


EK-Loop Angled Bracket - 140/120 mm can be mount directly into the case when there is a place for a 140 mm fan.

The 120 mm format FLT reservoir can also be mounted onto the EK-Loop Angled Bracket and secured together into the chassis.


Alternatively, you can drill four Ø4.5mm holes in the most suitable place on the wall of your computer chassis, using the electric power drill.

EK-Loop Angled Bracket – 140/120 mm can be installed directly into the chassis, using the enclosed M4 x 10 DIN7984 screws, M4 steel washers, and M4 nuts (as shown in the picture).

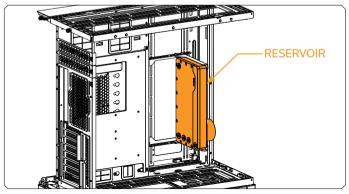

After securing the EK-Loop Angled Bracket – 140/120 mm into the chassis, you can attach the FLT reservoir. (See chapter: **Attaching the Reservoir to the EK-Loop Angled Bracket**)


INSTALLING THE EK-LOOP ANGLED BRACKET ONTO THE RADIATOR

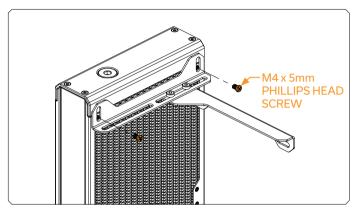

EK-Loop Angled Bracket - 140/120 mm can be mounted onto the 140 mm format radiator using the M4 x 5 mm Phillips head radiator mounting screws (as shown in the picture). There is no need for additional nuts, just tighten the screws evenly and do not use excessive force


Beacause this this configuration serves as an adapter from 140 mm radiator to 120 mm format reservoir, the base brackets need to be rotated as shown on the picture.

The configuration also limits the use of the slots on the angled bracket base parts. Especially if the bracket base is located by the inlet and the outlet ports of the radiator.

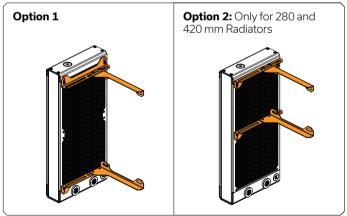


You can mount the bracket on each side of the radiator. On 280 and 420 mm radiators, the bracket can also be attached to the middle holes.


ATTACHING THE RESERVOIR TO THE EK-LOOP ANGLED BRACKET

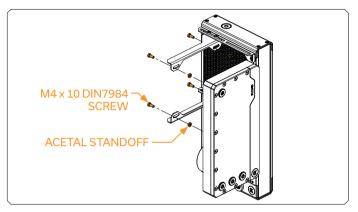


Carefully position the 120 format FLT reservoir onto the EK-Loop angled bracket and secure it with the enclosed M4 x 10 DIN 7984 screws and acetal standoffs (as shown in the picture). While tightening the screws, do not use excessive force. Make sure that all four (4) screws and standoffs are adequately secured!

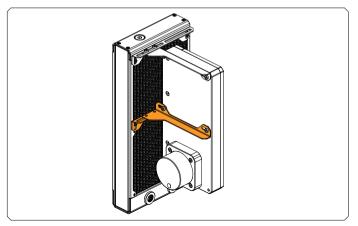

If you choose to use the holes in the middle, it is no longer possible to move the FLT reservoir from or toward the radiator!

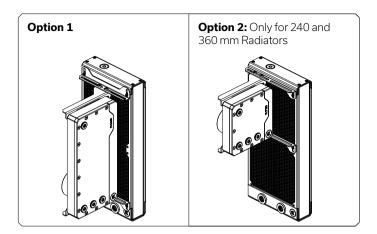

ATTACHING THE FITTINGS

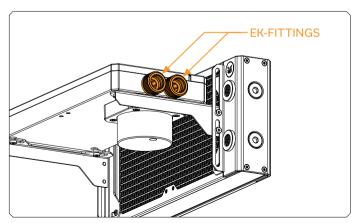

When using the EK-Loop Angled Bracket with FLT products, we recommend you use EK-Fittings because of their compatibility, and there will be no reason to worry.

Before you attach the fittings, make sure the acetal standoffs are placed correctly. Otherwise, you risk the possibility of scratching your FLT product (especially when using EK-Torque HTC-16 Fittings).

SUPPORT AND SERVICE

For assistance please contact:

http://support.ekwb.com/

EKWB d.o.o. Pod lipami 18 1218 Komenda Slovenia - EU

SOCIAL MEDIA

- **f** EKWaterBlocks
- @EKWaterBlocks
- **ekwaterblocks**
- EKWBofficial
- n ekwaterblocks

