


## Installation and mounting instructions for **EK-NB S-MAX** water block:


This product is intended for expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your components. EK Water Blocks assumes no liability whatsoever, expressed or implied, for the use of these products, nor their installation. The following instructions are subject to change without notice. Please visit our web site at [www.ekwaterblocks.com](http://www.ekwaterblocks.com) for updates or national reseller.

**If you need to screw in the fittings, please use small amount of force otherwise the high flow fittings might break. The fittings do not need to be tightened with high force.**

- Step 1.** Remove Motherboard from the cabinet and mount the block on a flat surface.
- Step 2.** Apply thermal compound: lightly coat the North Bridge core with for example Ceramique™ thermal compound. Follow this link [http://www.acticisilver.com/ceramique\\_instructions.htm](http://www.acticisilver.com/ceramique_instructions.htm) for detailed instructions. EK Water Blocks recommends non-conductive thermal compound.

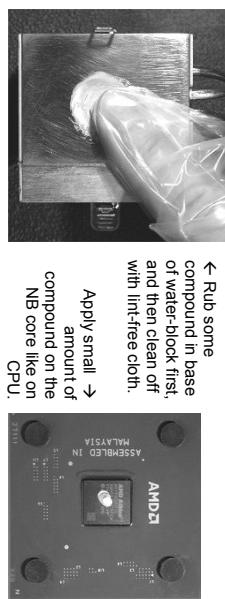

- Step 3.** Install the long M3 screws, spring with PVC washer, metal washer and M3 nut as seen on picture 1.

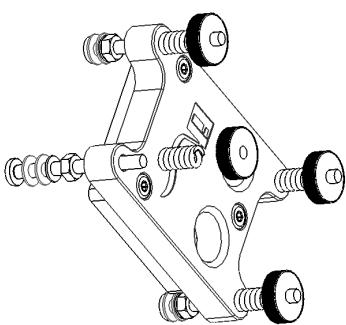

*Picture 1. Installing EK-NB S-MAX*

**Step 4.** Tighten all screws equally and gradually each screw to prevent the core from breaking.

- Step 5.** Connect the water-block(s) to your water cooling system and attach the tubes. Any fitting can be used as an inlet. The EK-NB S-MAX usually series are shipped with two fittings. To insecure the tubes stays properly on the fittings please use hose clamps or appropriate substitute. The use of an algaecide is nonetheless recommended in any liquid cooling system.

### **VERY IMPORTANT NOTICE**

Once the installation is completed, it is always a good idea to test the circuit for leaks, prior to powering up the computer. We recommend a 24 hour leak test prior to powering up the computer. Do not test the water block directly from city water pressure. This will bow the top of the housing and render the block unusable (and will void your warranty).

### **IMPORTANT DISCLOSURES:**

While all efforts have been made to provide the most comprehensive tutorial possible, EK Water Blocks assumes no liability expressed or implied for any damage(s) occurring to your components as a result of using EK Water Blocks cooling products, either expressly or implied for any damage(s) occurring to your components as a result of using EK Water Blocks cooling products. Once the installation is completed, it is always a good idea to test the circuit for leaks, prior to powering up the computer. We recommend a 24 hour leak test prior to powering up the computer. Do not test the water block directly from city water pressure. This will bow the top of the housing and render the block unusable (and will void your warranty).


**WARRANTY:**  
Our products are guaranteed for 24 months from the date of delivery to the final user against defects in materials or workmanship. During this period, they will be repaired or have parts replaced provided that: (I) the product is returned to the agent from which it was purchased; (II) the product has been purchased by the end user and not used for hire purposes; (III) the product has not been misused, handled carelessly, or other than in accordance with any instructions provided with respect to its use. This guarantee does not confer rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer. **The guarantee is not valid if there are used aggressive UV additives.**

## Installation and mounting instructions for **EK-NB S-MAX** water block:


This product is intended for expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your components. EK Water Blocks assumes no liability whatsoever, expressed or implied, for the use of these products, nor their installation. The following instructions are subject to change without notice. Please visit our web site at [www.ekwaterblocks.com](http://www.ekwaterblocks.com) for updates or national reseller.

**If you need to screw in the fittings, please use small amount of force otherwise the high flow fittings might break. The fittings do not need to be tightened with high force.**

- Step 1.** Remove Motherboard from the cabinet and mount the block on a flat surface.
- Step 2.** Apply thermal compound: lightly coat the North Bridge core with for example Ceramique™ thermal compound. Follow this link [http://www.acticisilver.com/ceramique\\_instructions.htm](http://www.acticisilver.com/ceramique_instructions.htm) for detailed instructions. EK Water Blocks recommends non-conductive thermal compound.

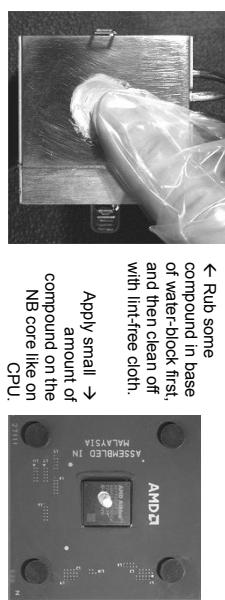

- Step 3.** Install the long M3 screws, spring with PVC washer, metal washer and M3 nut as seen on picture 1.

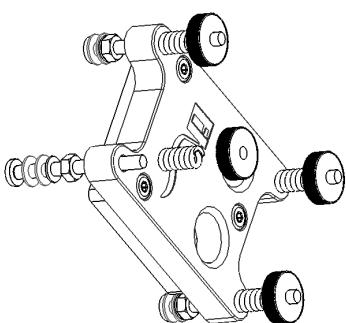

*Picture 1. Installing EK-NB S-MAX*

**Step 4.** Tighten all screws equally and gradually each screw to prevent the core from breaking.

- Step 5.** Connect the water-block(s) to your water cooling system and attach the tubes. Any fitting can be used as an inlet. The EK-NB S-MAX usually series are shipped with two fittings. To insecure the tubes stays properly on the fittings please use hose clamps or appropriate substitute. The use of an algaecide is nonetheless recommended in any liquid cooling system.

### **VERY IMPORTANT NOTICE**

Once the installation is completed, it is always a good idea to test the circuit for leaks, prior to powering up the computer. We recommend a 24 hour leak test prior to powering up the computer. Do not test the water block directly from city water pressure. This will bow the top of the housing and render the block unusable (and will void your warranty).

### **IMPORTANT DISCLOSURES:**

While all efforts have been made to provide the most comprehensive tutorial possible, EK Water Blocks assumes no liability expressed or implied for any damage(s) occurring to your components as a result of using EK Water Blocks cooling products, either expressly or implied for any damage(s) occurring to your components as a result of using EK Water Blocks cooling products. Once the installation is completed, it is always a good idea to test the circuit for leaks, prior to powering up the computer. We recommend a 24 hour leak test prior to powering up the computer. Do not test the water block directly from city water pressure. This will bow the top of the housing and render the block unusable (and will void your warranty).

**WARRANTY:**  
Our products are guaranteed for 24 months from the date of delivery to the final user against defects in materials or workmanship. During this period, they will be repaired or have parts replaced provided that: (I) the product is returned to the agent from which it was purchased; (II) the product has been purchased by the end user and not used for hire purposes; (III) the product has not been misused, handled carelessly, or other than in accordance with any instructions provided with respect to its use. This guarantee does not confer rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer. **The guarantee is not valid if there are used aggressive UV additives.**