


This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment. EK Water Blocks assumes no liability whatsoever, expressed or implied, for the use of these products, nor their installation. The following instructions are subject to change without notice. Please visit our web site at [www.ekwaterblocks.com](http://www.ekwaterblocks.com) for updates. Before installation of this product please read important notice, disclosure and warranty conditions printed on the back of the box.

**STEP 1: GENERAL INFORMATION.** Sample picture of Powercolor HD 5870 PCS+ graphic card.




**STEP 2: PREPARING YOUR GRAPHIC CARD RADEON HD5870 V2 CARD**

EK-FC5870 V2 backplate is very easy to install. First install EK-FC5870 V2 water block according to its manual (check compatibility on our cooling configurator). If you have it already installed, please remove all (encircled) screws.

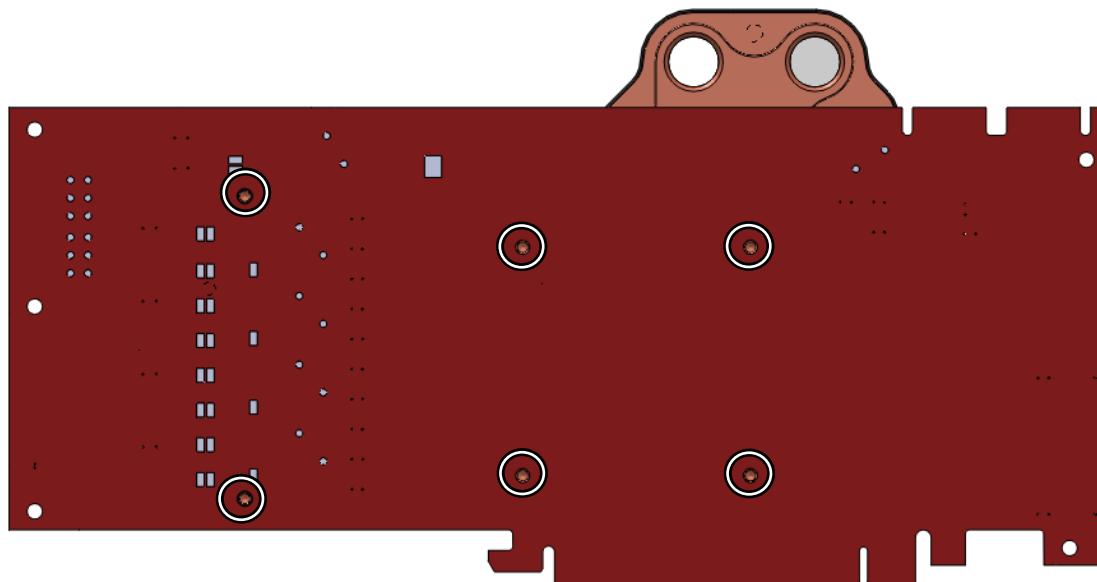

**STEP 3: ATTACHING EK-FC5870 V2 BACKPLATE**

Take enclosed mounting screws and install them as shown on picture below. EKWB recommends users to start with M3x10 screws. Afterwards fasten remaining M3x8 screws (HINT: do not tighten screws until they are all positioned in their mounting holes). Please note that nuts with washers must be used on M3x8 screws in order to provide proper connection of PCB and backplate. Backplate has milled in standoffs, so there is no fear of overtightening the screws. Nevertheless, do not exaggerate with screwing force as there is no need for it. (Please note that EKWB holds no responsibility of any kind if assembly is not made by instructions. This applies also for all products that are not out of EKWB production line. Users must by all means also consider instructions that are being made for proper use of FC blocks.)

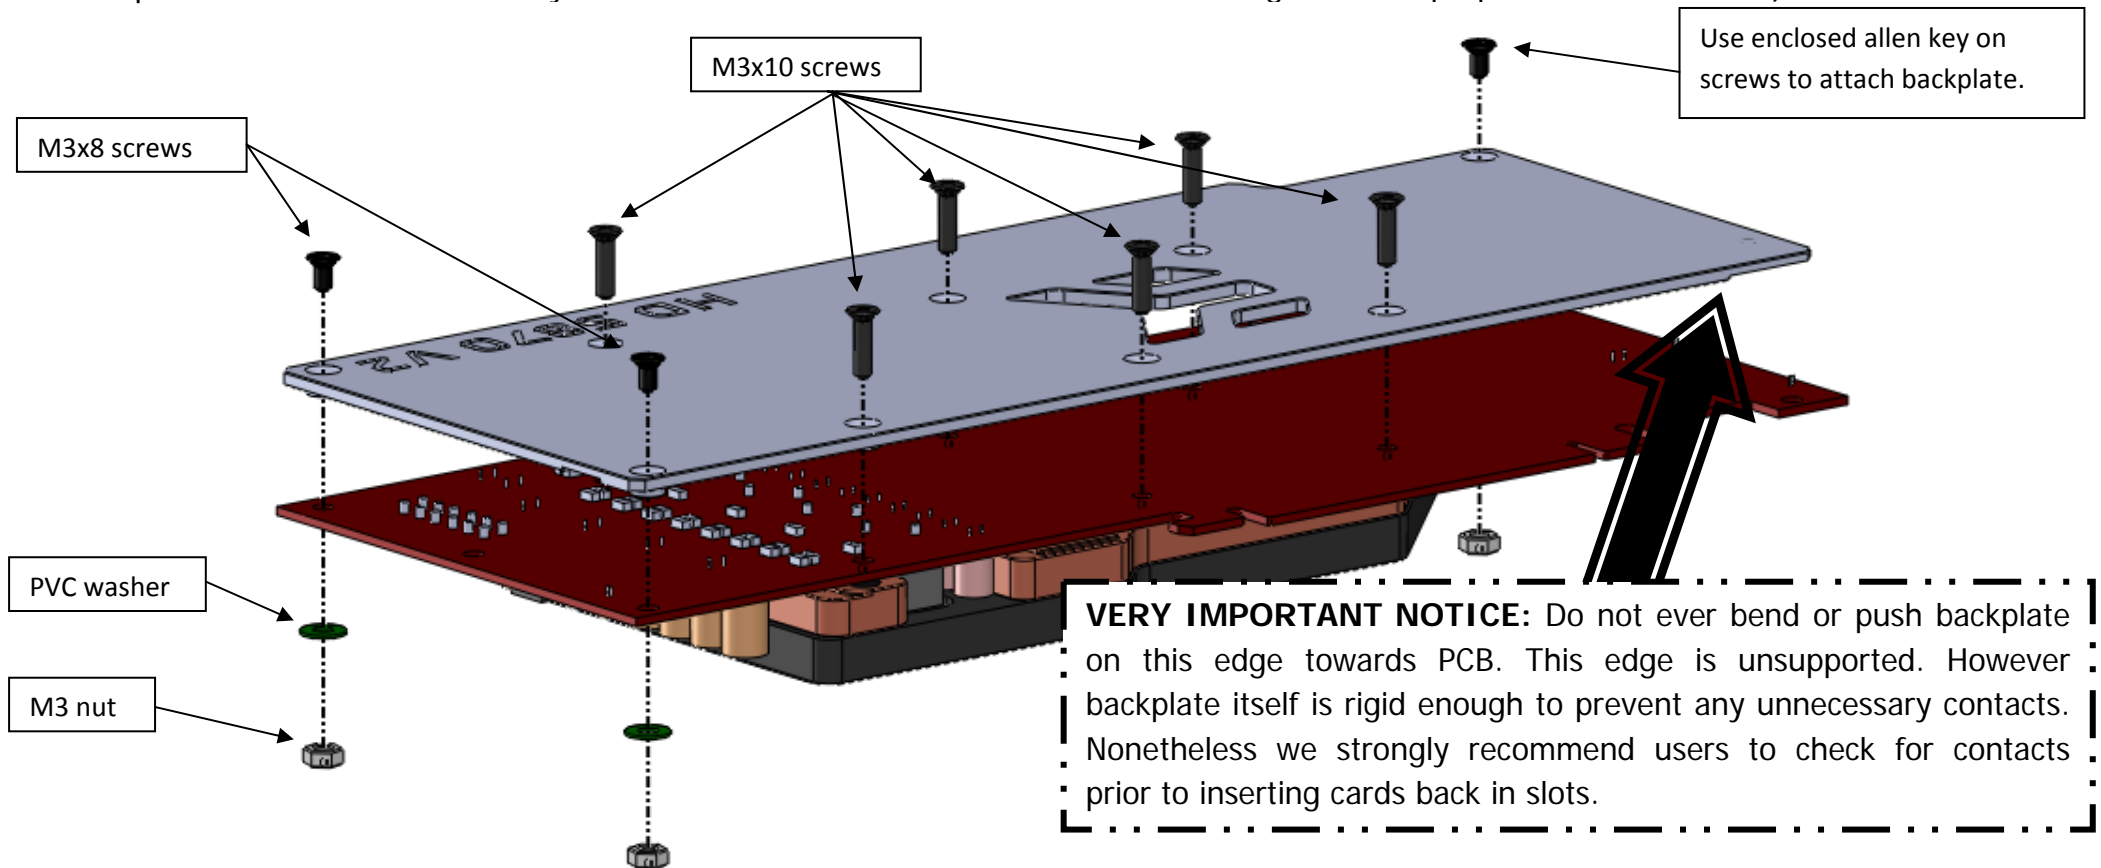

**REQUIRED TOOLS AND MOUNTING SCREWS:**



6 x screws M3x107991DIN



3 x M3x8 7991DIN



3 x M3 nut



2mm allen key