


EK-Quantum Vector FE RTX 3080

GPU WATER BLOCK

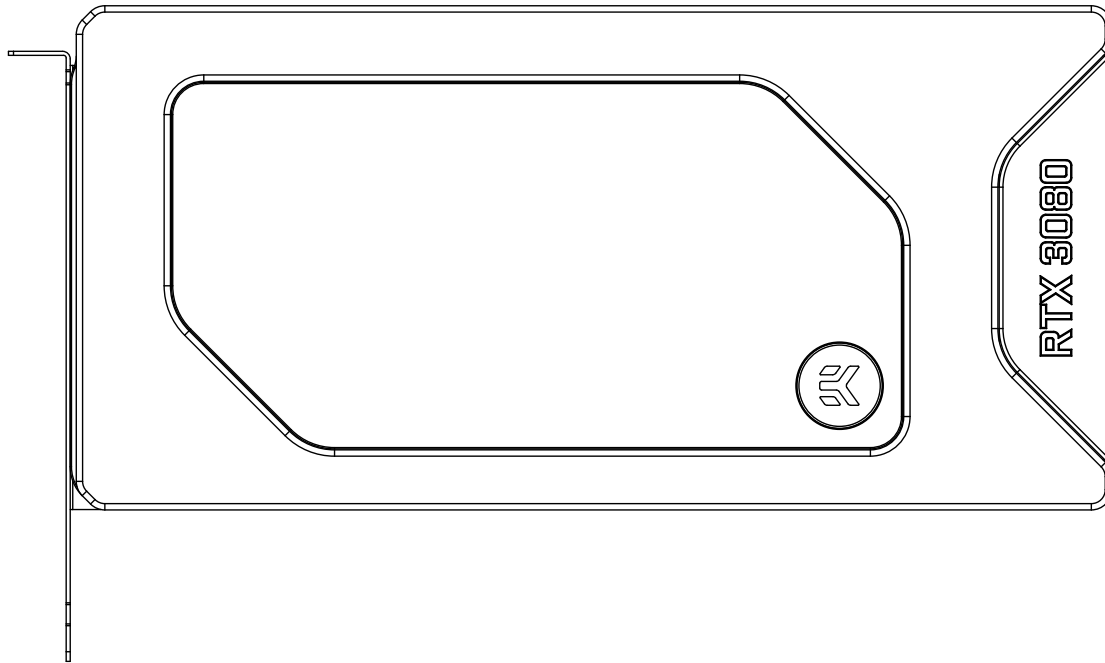

Before you start using this product, please follow these basic guidelines:

Carefully read the manual before beginning with the installation process.

Remove your graphics card from the computer for the safest mounting process to prevent any possible damage to your GPU or its circuit board (PCB).

EK Fittings require only a small amount of force to screw them firmly in place since the liquid seal is ensured with the rubber O-ring gaskets.

The use of quality market-proven corrosion-inhibiting coolants is always strongly recommended for any liquid cooling system.


Do not use pure distilled water as a cooling liquid! For best results, EK recommends the use of EK-CryoFuel Coolants.

Make sure to bleed air out of your water block thoroughly to reach optimal performance.

TABLE OF CONTENTS


BOX CONTENTS	4
WATER BLOCK DIMENSIONS	5
TECHNICAL SPECIFICATIONS AND MAIN WATER BLOCK PARTS	6
PREPARING THE GRAPHICS CARD	7
REMOVING THE STOCK COOLER	7
CLEANING THE PCB	7
CUTTING AND PLACING THERMAL PADS	8
APPLYING THERMAL COMPOUND	9
INSTALLING THE WATER BLOCK	9
REMOVING THE STOCK BACKPLATE	9
REMOVING THE STOCK BACKPLATE COVER	10
REMOVING THE PRE-INSTALLED I/O SHIELD	10
PLACING THE BLOCK ON THE GRAPHICS CARD	11
ATTACHING THE BLOCK TO THE GRAPHICS CARD	11
ATTACHING THE I/O SHIELD	12
INSTALLING THE BACKPLATE	13
BACKPLATE DIMENSIONS	13
BACKPLATE COVER DIMENSIONS	13
REQUIRED TOOLS	14
CUTTING AND PLACING THERMAL PADS	14
ATTACHING THE BACKPLATE	15
REPLACING THE TERMINAL (Optional Step)	16
CHECKING FOR CONTACT	17
INSERTING THE GRAPHICS CARD INTO THE CHASSIS	18
INSTALLATION OF FITTINGS AND TUBING	18
CONNECTING THE D-RGB LED STRIP	19
TESTING THE LOOP	19
SUPPORT AND SERVICE	20
SOCIAL MEDIA	20

BOX CONTENTS

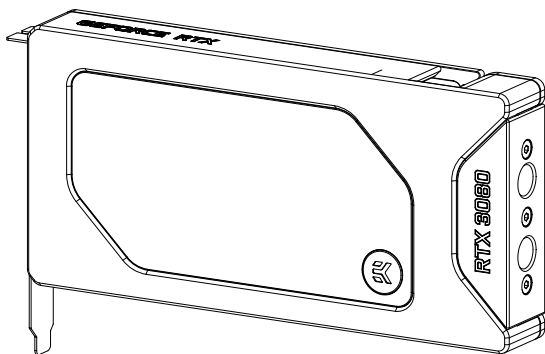


EK-Quantum Vector FE RTX 3080 D-RGB + Backplate


Universal Mounting Mechanism – You may not need every screw from this package.




M2.5x4 AX1 Screw (4 pcs)

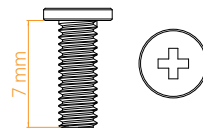


M2.5x7 AX1 Screw (4 pcs)




M3x5 Screw (3 pcs)

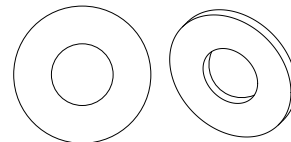

PVC Washer M2.5 (4 pcs)

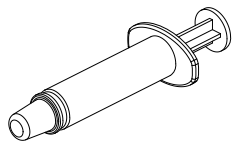


Thermal Grease (1 pc)

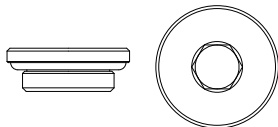


EK-Plug G1/4 (2 pcs)



Allen Key 2 mm (1 pc)



Allen Key 6 mm (1 pc)

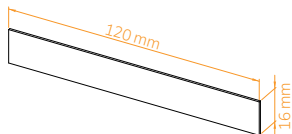

Thermal Pad F 1.0 mm (10 pcs)




Additional Terminal




Allen Key 2.5 mm (1 pc)

WATER BLOCK DIMENSIONS

Direct Terminal

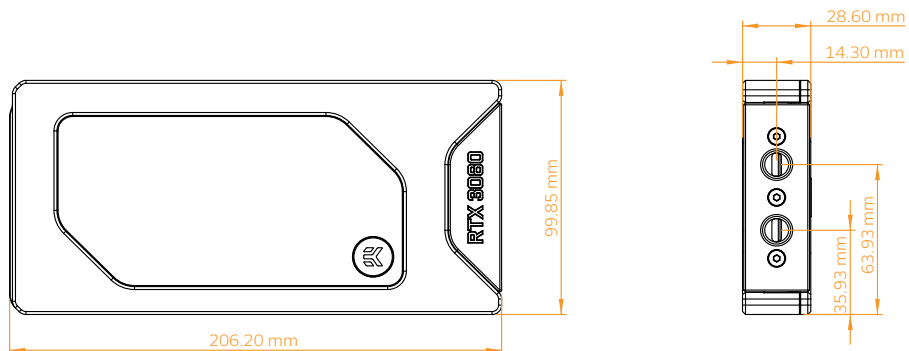


Throughout Terminal

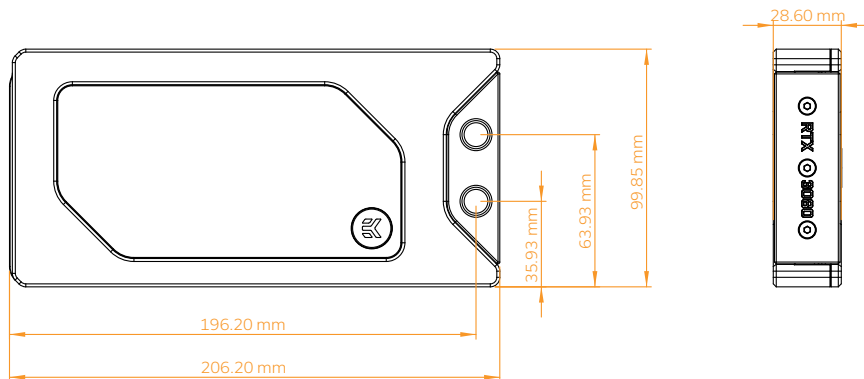

TECHNICAL SPECIFICATIONS AND MAIN WATER BLOCK PARTS

Technical Specification:

- Dimensions (LxHxW): 206 x 100 x 29 mm
- D-RGB (Addressable RGB) Cable - Length: 500 mm
- D-RGB LED Count: 20
- D-RGB Connector: Standard 3-Pin (+5V, Data, Blocked, Ground)

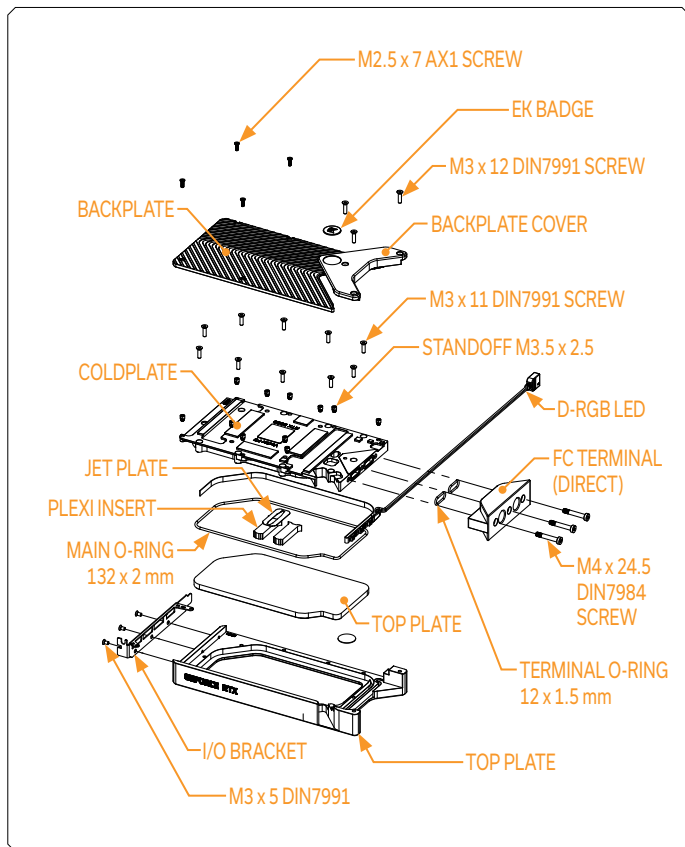

PREPARING THE GRAPHICS CARD

STEP 1


REMOVING THE STOCK COOLER

Place your graphics card on the flat surface and carefully remove the stock cooler. Do not forget to unplug all the LED and fan connectors. Pay attention to the following steps when installing the EK-Quantum Vector FE RTX 3080 water block onto your graphics card.

STEP 2

CLEANING THE PCB

Carefully detach the original stock cooler after removing all screws that are securing it to the board. Wipe off the remains of the original thermal compound using a nonabrasive cloth or Q-tip, as shown in the sample image, until the components and circuit board are completely clean. EK recommends the use of denatured alcohol for removing TIM leftovers.

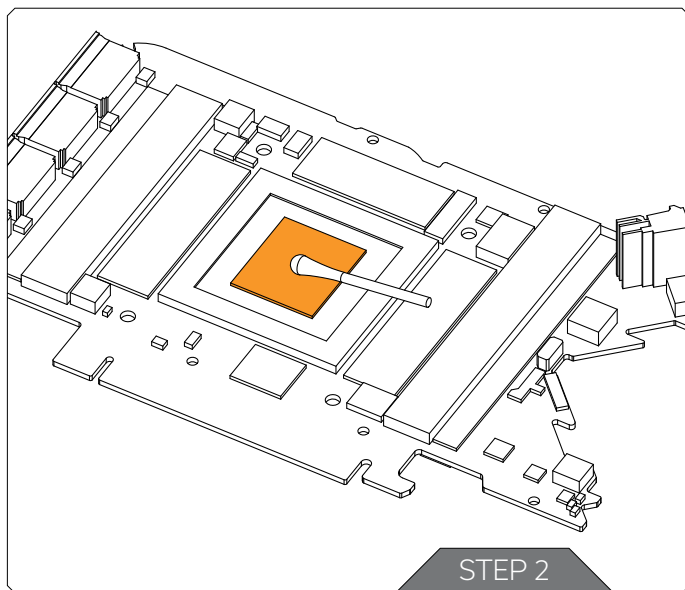

CUTTING AND PLACING THERMAL PADS

Thermal Pad F – 1.0 mm (120 x 16 mm)



STEP 1

STEP 1

Your GPU water block comes with thermal pads that have to be cut into smaller pieces to cover all the VRM components, such as COILs, MOSFETs, and drivers.




You must remove the protective foil from both sides of the thermal pad before installation.

Replacement thermal pads:

10x Thermal Pad F 1.0mm – (120 x 16 mm) EAN: 3830046996732

Thermal Pad F 1.0mm

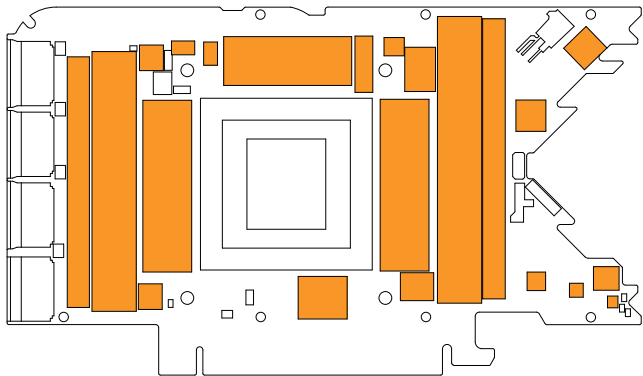


STEP 2

STEP 2

Once cut to size, thermal pads should be placed on the PCB, as illustrated below. EK made sure to provide you with more than an adequate quantity of thermal pads to complete this Step.

APPLYING THERMAL COMPOUND

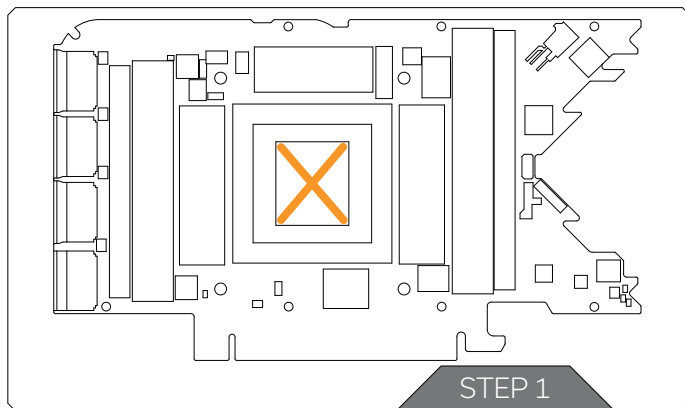

STEP 1


Apply the enclosed EK-TIM Ectotherm thermal grease (thermal compound) on the CPU heat spreader - IHS - as shown in the image. The layer of the thermal compound must be thin and even over the entire surface of the IHS.




The excessive or uneven application of thermal grease may lead to poor performance!

For this Step, you will need:

Thermal Grease



INSTALLING THE WATER BLOCK

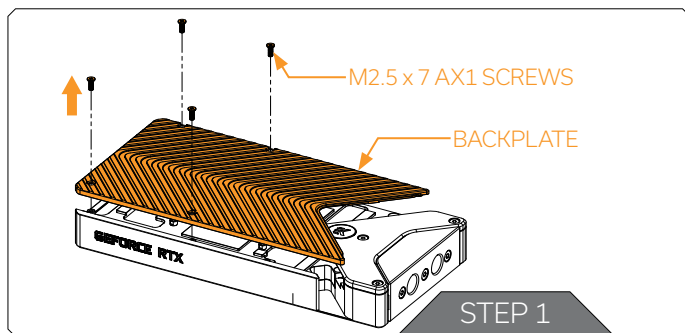


STEP 1


REMOVING THE STOCK BACKPLATE

Carefully unscrew four (4) preinstalled backplate screws (M2.5 X 7 AX1) and remove the backplate, as shown in the picture. Save the screws and backplate for later use.

For this Step, you will need:

Phillips Head Screwdriver



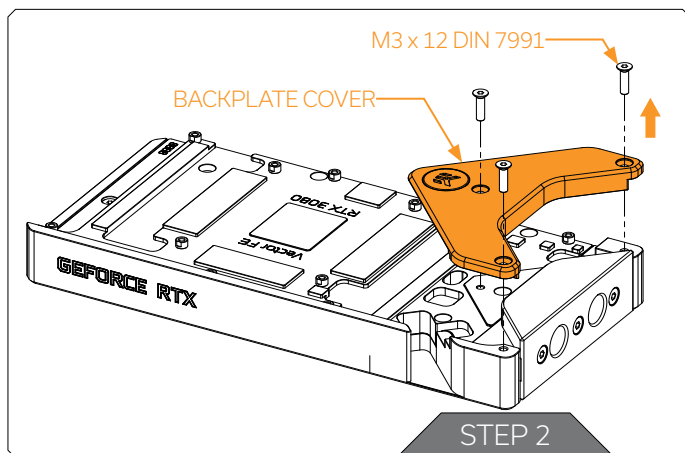


STEP 2

REMOVING THE STOCK BACKPLATE COVER

After removing the backplate, unscrew the three (3) backplate cover screws as shown in the picture, using the enclosed Allen Key (2 mm), and take off the backplate cover. Save the screws and cover for later use.

For this Step, you will need:

Allen Key 2.0 mm

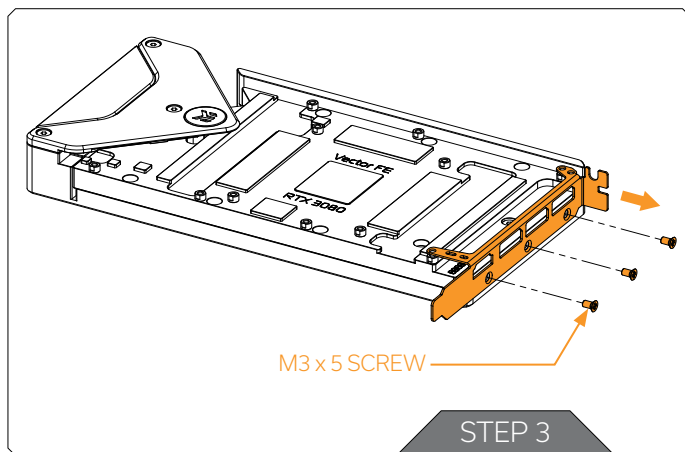


STEP 3


REMOVING THE PRE-INSTALLED I/O SHIELD

Unscrew the three (3) M3X5 screws using Phillips head-screwdriver and remove the I/O shield (as shown in the picture). Save the screws and I/O shield for the later use!

For this Step, you will need:

Phillips Head Screwdriver



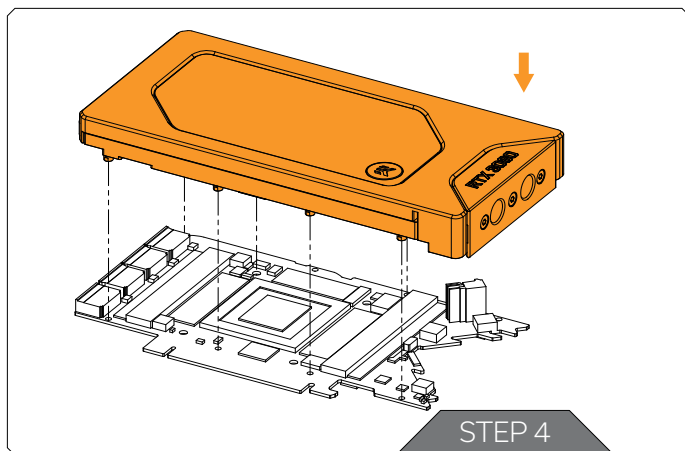

STEP 4


PLACING THE BLOCK ON THE GRAPHICS CARD

This procedure is the same for all full-cover water blocks.

Carefully position the water block with preinstalled standoffs on the graphics card. During this process, make sure you have aligned mounting holes of the PCB with holes of the water block (the same applies to other tops).



Pay attention not to use too much force when pressing the block down to the PCB since chip dies are prone to cracking.

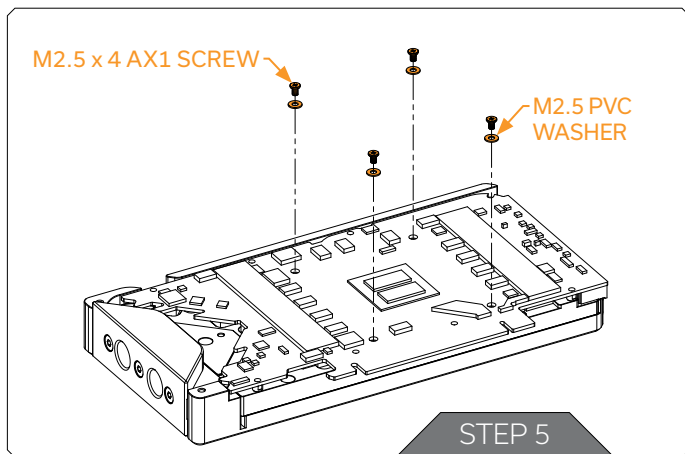

STEP 5

ATTACHING THE BLOCK TO THE GRAPHICS CARD

Use four (4) M2.5 X 4 AX1 screws and M2.5 PVC washers, as shown in the image. Tighten the screws around the GPU core evenly using the Phillips head screwdriver. Always use a plastic washer under each screw!

For this Step, you will need:


M2.5 x 4 AX1
Screw (4 pcs)




M 2.5 PVC Washer
(4 pcs)



Phillips Head
Screwdriver



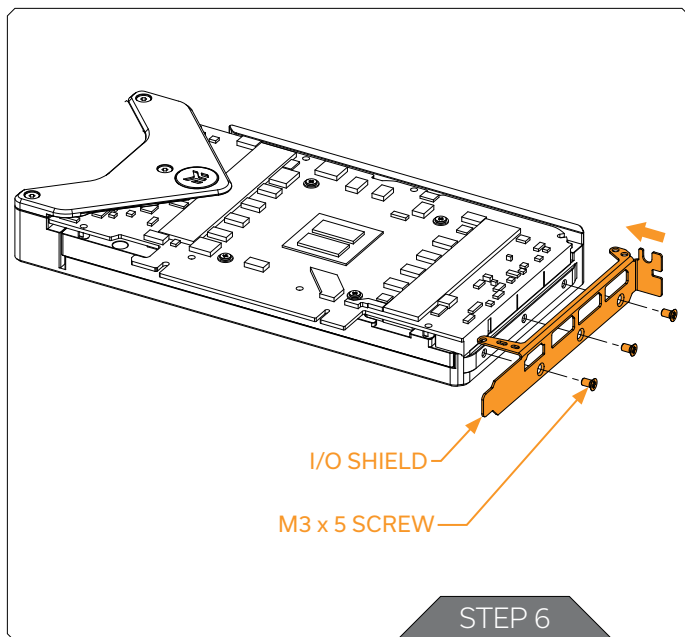

STEP 6

ATTACHING THE I/O SHIELD


Take the stored screws and I/O shield after attaching the water block. Attach them on to the water block as shown in the picture. Do not use excessive force.

For this Step, you will need:


M3 x 5 Screws
(3 pcs)




I/O Shield




Phillips Head
Screwdriver



INSTALLING THE BACKPLATE

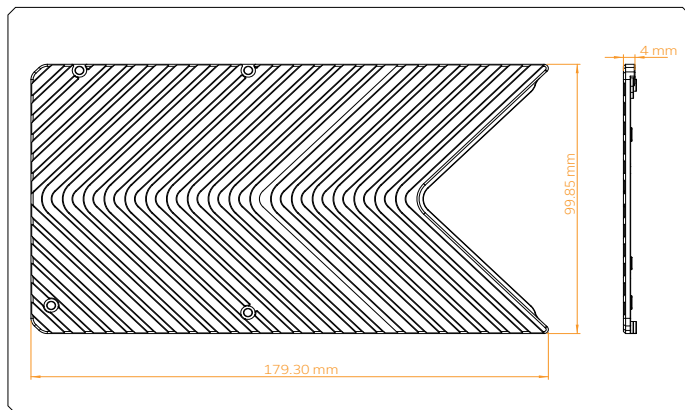


BACKPLATE DIMENSIONS

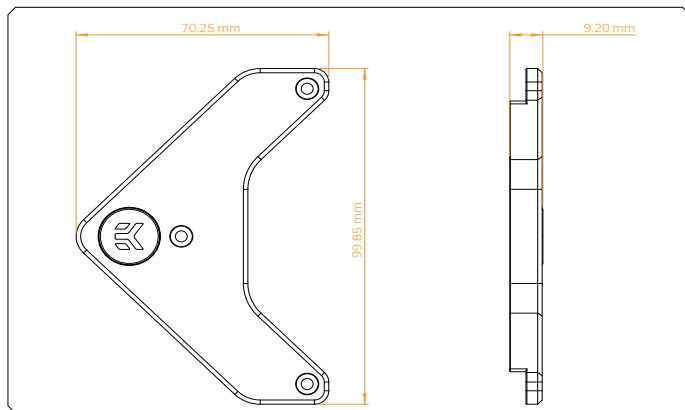


BACKPLATE COVER DIMENSIONS

REQUIRED TOOLS

Phillips Head Screwdriver



Scissors

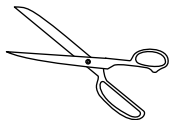


CUTTING AND PLACING THERMAL PADS

Thermal Pad F – 1.0 mm (120 x 16 mm)



Thermal Pad F 1.0 mm

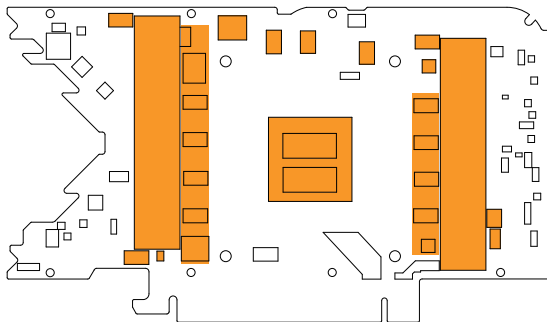


Your backplate comes with thermal pads that have to be cut into smaller pieces to cover all the VRM components. EK made sure to provide you with more than an adequate quantity of thermal pads to complete this Step.



CAUTION: You must remove the protective foil from both sides of the thermal pad before installation.

Once cut to size, thermal pads should be placed on the backplate, as shown in the image.

ATTACHING THE BACKPLATE


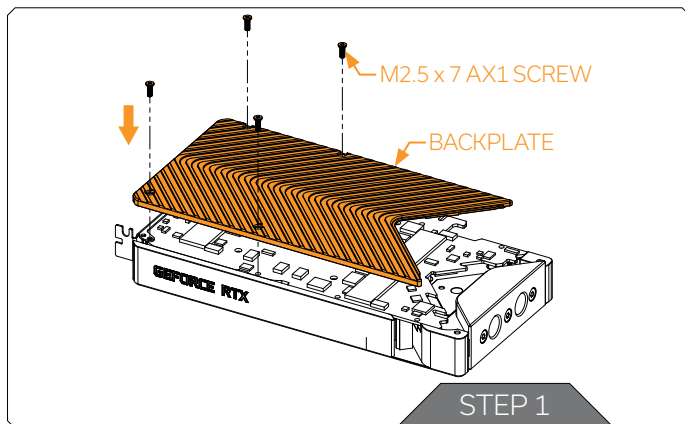


STEP 1

Place the backplate on the PCB and make sure all holes are aligned. Position an M2.5 x 7 AX1 screw in each of the three (4) mounting holes (as shown in the image) and tighten them evenly with a Phillips Head Screwdriver.

For this Step, you will need:

M2.5 x 7 AX1
Screw (4 pcs)

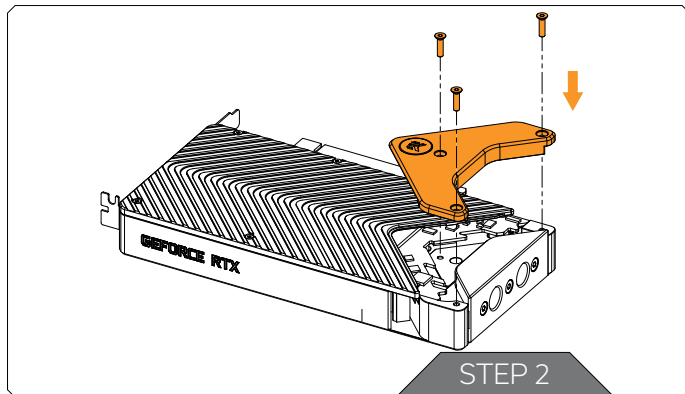


STEP 2


After securing the backplate, place the backplate cover on the PCB and make sure all holes are aligned. Position an M3 X 12 DIN7991 screw in each of the three (3) mounting holes (as shown in the image) and tighten them evenly with a Allen Key 2mm. **Do not use excessive force!**

For this Step, you will need:


Allen Key 2.0 mm



M3 x 12 DIN7991 Screw (3 pcs)



REPLACING THE TERMINAL (Optional Step)

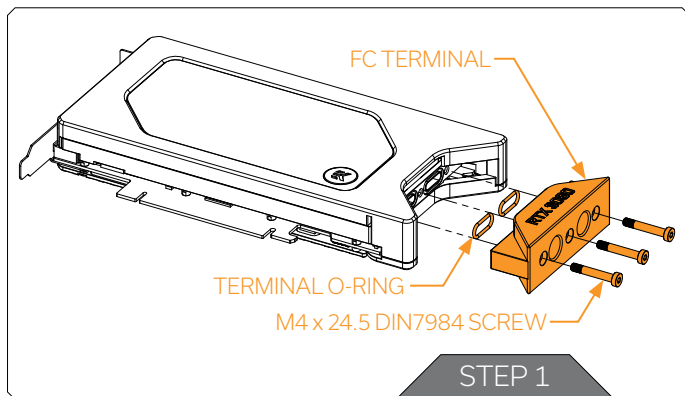


With the EK-Quantum Vector FE RTX 3080 water block, you also get an additional terminal. Follow these steps to install it.

STEP 1

Unscrew three (3) M4X24.5 DIN7984 terminal screws with the enclosed 2.5mm Allen Key. Remove the stock terminal. Save the screws and terminal O-Rings for later.

For this Step, you will need:

Allen Key 2.5 mm

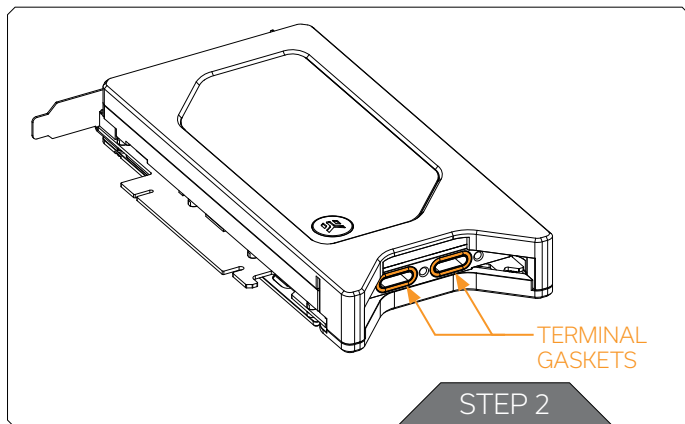



STEP 2

Before you attach the new terminal, make sure that terminal gaskets are placed inside holes on the coldplate (as shown in the picture).

For this Step, you will need:

Terminal Gasket (2 pcs)




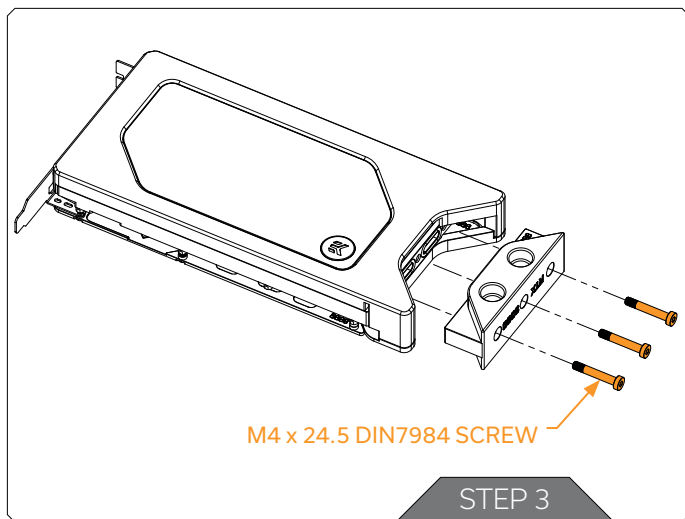

STEP 3

Carefully place the terminal on the coldplate and secure it with previously saved M4 X 24.5 DIN7984 screws. Do not use excessive force when tightening the screws.

For this Step, you will need:

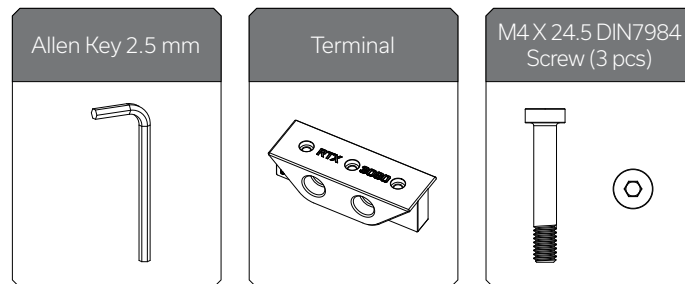

CHECKING FOR CONTACT

If necessary, temporarily remove the water block to check for uniform surface contact between the block and components. Pay special attention to the VRM section of the graphics card. Check whether the water block makes contact with the intended integrated circuit. Then repeat Steps from the previous section to re-attach the block.



In case you fail to obtain good contact, please check again or contact our support service at <https://www.ekwb.com/customer-support/>.


INSERTING THE GRAPHICS CARD INTO THE CHASSIS

Carefully lift your graphics card with the installed water block and insert it into your PC's motherboard PCIe express expansion slot. Please bear in mind that your graphics card is very likely heavier than before it was equipped with the water block.



You need to be very careful when handling the graphics card. Avoid all unnecessary manipulation of the water block assembly that might damage your card or water block.

INSTALLATION OF FITTINGS AND TUBING

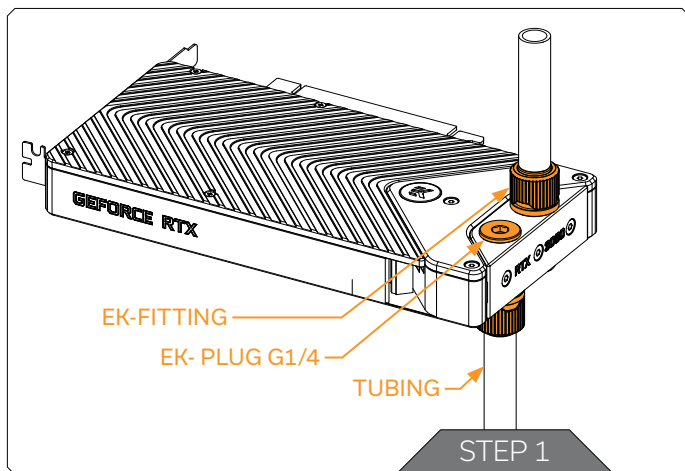

STEP 1

Screw-in two (2) G1/4 threaded male fittings. Attach the liquid cooling tubes and connect the water block(s) to the cooling loop.



Do not forget to plug the remaining two openings with enclosed EK-Plug G1/4 or its equivalent.


You can use any opening as an inlet/outlet port.

EK recommends using EK fittings with all EK water blocks.



CAUTION: When using connectors other than EK fittings, pay special attention to the length of the fittings' male G1/4" thread - 5mm is the maximum G1/4" thread length allowed!

CONNECTING THE D-RGB LED STRIP

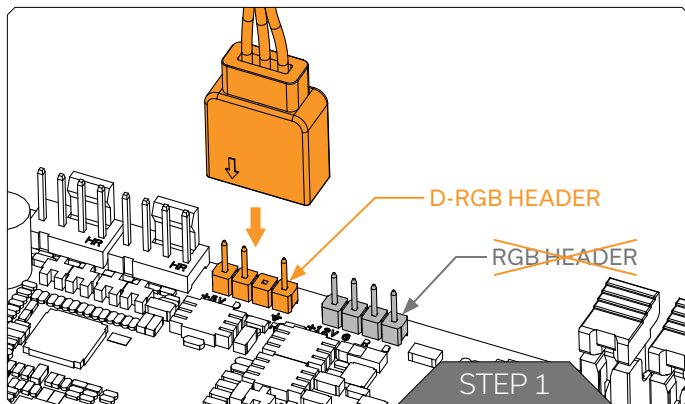

STEP 1

Plug the **4-pin D-RGB** connector from the GPU water block to the **D-RGB Header** on your motherboard or controller. The LED strip will work only if the pin layout on the header is as follows: **+5V, Data, Empty, Ground**.



Incorrect installation or installation to a wrong header can damage to the LED strip or the header itself!

TESTING THE LOOP

To make sure the installation of EK components was successful, we recommend you perform a 24-hour leak test.

When your loop is complete and filled with coolant, connect the pump to a PSU outside of your system. Do not connect power to any of the other components. Turn on the PSU and let the pump run continuously.

Inspect all parts of the loop, and in case the coolant leaks, fix the issue and repeat the testing process. To prevent possible damage, please ensure that all hardware is dry before the system is powered on.

SUPPORT AND SERVICE

In case you need assistance, please contact:
<https://www.ekwb.com/customer-support/>

EKWB d.o.o.
Pod lipami 18
1218 Komenda
Slovenia - EU

SOCIAL MEDIA

 EKWaterBlocks

 @EKWaterBlocks

 ekwaterblocks

 EKWBofficial

 ekwaterblocks

