


EK-FC Radeon Vega Backplate

USER GUIDE

GENERAL INFORMATIONS

CONTENT:

- EK-FC Radeon Vega Backplate
- Mounting screws
- Thermal pads

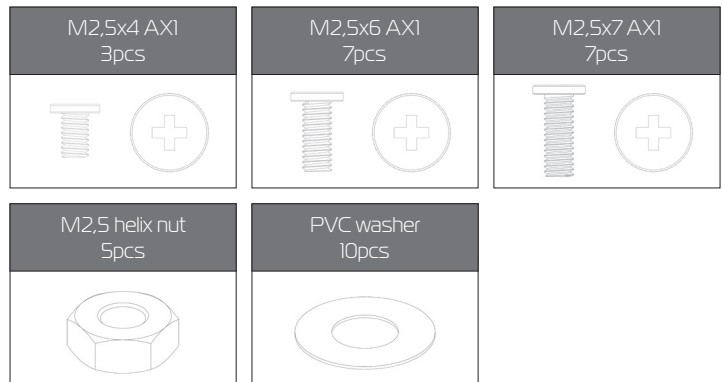

REQUIRED TOOLS:


- Scissors
- Phillips head screwdriver
- Torx 6 screwdriver

/1/

PREPARING YOUR GRAPHICS CARD

Before you install the backplate, you have to install EK-FC Radeon Vega series water block according to its installation manual. If you have it already installed, please check the picture below to see which mounting


screws are to be left in their position and which are to be removed. Please remove the six (6) M2.5x4 AX1 screws and their PVC washers as well.

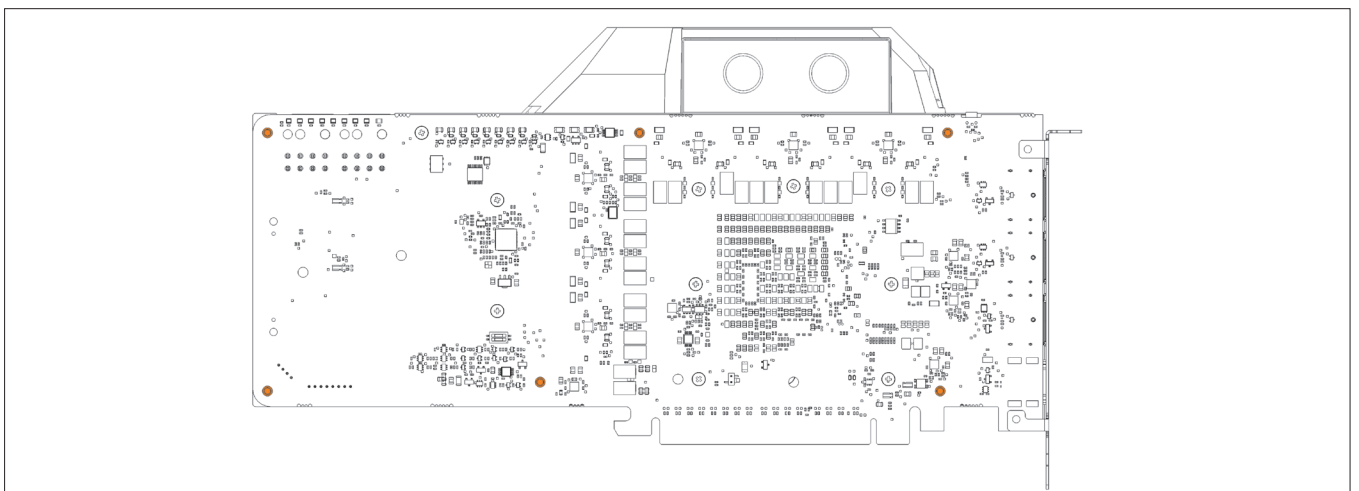

/2/

EK-FC Radeon Vega Backplate features passive cooling of the printed circuit board and its components therefore it is mandatory to install the

enclosed thermal pads. Please install enclosed thermal pads as shown on the picture below. You may need to trim the excess thermal pad.

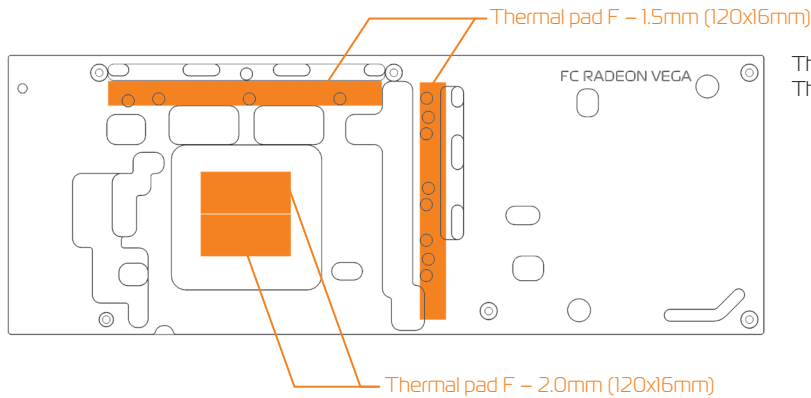


Thermal pad F - 2.0mm (120x16mm) – (EAN: 3830046996756)
 Thermal pad F - 1.5mm (120x16mm) – (EAN: 3830046996749)

ATTACHING EK-FC Radeon Vega BACKPLATE TO THE GRAPHICS CARD

Take enclosed mounting screws and install them as shown on picture below. Use six (6) M2.5x7 AXI screws, and tighten them using Phillips head screwdriver.

HINT: Do not tighten screws until they are all positioned in their mounting holes. The backplate has milled in standoffs, so there is no fear of over tightening of the screws. Nevertheless do not exaggerate with screwing force as there is no need for it.

By all means users must also consider that this product is intended to be used only with EK-FC Radeon Vega series water blocks. No other 3rd party heat sinks or coolers are officially supported! EK does not offer any assistance or support in the latter application.

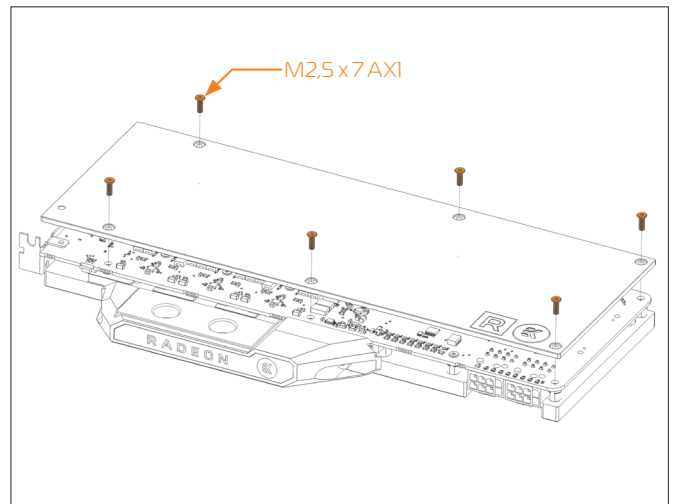

IMPORTANT DISCLOSURES

VERY IMPORTANT NOTICE:

Once the installation is completed, it is a recommended practice to test the cooling circuit for leaks prior to powering up the computer. We recommend a 24 hour leak test prior to powering up the computer. Do not test the water block using city water pressure. This will rupture the top of the housing and render the block unusable (and will void your warranty). While all efforts have been made to provide the most comprehensive tutorial possible, EK Water Blocks assumes no liability expressed or implied for any consequential damage(s) occurring to your equipment as a result of using EK Water Blocks cooling products, either due to errors or omissions on our part in the above instructions, or due to failure or defect in the EK Water Blocks cooling products.

WARRANTY:

Our products are warranted against defects in materials or workmanship for a period of 24 months beginning from the date of delivery to the final user. During this period, products will be repaired or have parts replaced at our discretion provided that: (I) the product is returned to the agent from whom it was purchased; (II) the product has been purchased by an end user and has not used for commercial purposes; (III) the product has not been mis-used, handled carelessly, or used in a manner other than in accordance with the instructions provided describing its installation and proper use. This warranty does not confer rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an extra benefit and does not affect your statutory rights as a consumer. This warranty is voided if the product comes in contact with aggressive UV additives or other improper liquids.

EK blocks are sealed with warranty void circular label, which proves that the block has withstood a pressure leak test. Removing it will void leak-free guarantee and not the guarantee on the product itself. Any other RMA issues can be reported to EK Support at <http://www.ekwb.com/support> for further analysis.