


EK-Loop VTX PWM Motor

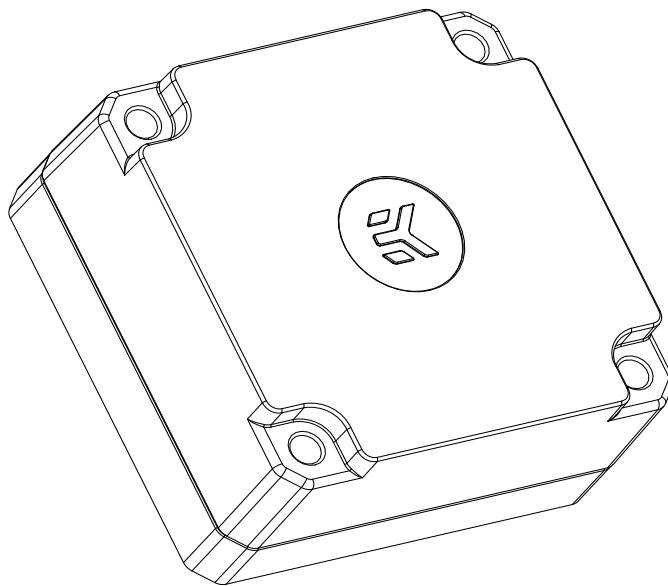

This product is intended for installation by expert users only. Please consult with a qualified technician since improper installation may result in damage to the equipment. EK assumes no liability whatsoever, expressed or implied, for the use of these products, or their installation. The following instructions are subject to change without notice. Please visit our website at www.ekwb.com for updates.


Before you start using this product please follow these basic guidelines:

Carefully read the manual before beginning with the installation process.

TABLE OF CONTENT

BOX CONTENTS	4
DIMENSIONS	4
TECHNICAL SPECIFICATIONS	5
COMPATIBILITY	5
PUMP INSTALLATION	6
CONNECTING THE PUMP	7
TESTING THE LOOP	7
SUPPORT AND SERVICE	8
SOCIAL MEDIA	8


BOX CONTENTS

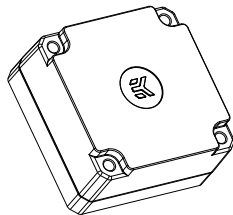

EK-Loop VTX PWM Motor (1 pc)




M4x35 ISO 7984 Screw (4 pcs)

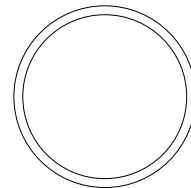

OR 46x2.5 EPDM70 (1 pc)

DIMENSIONS

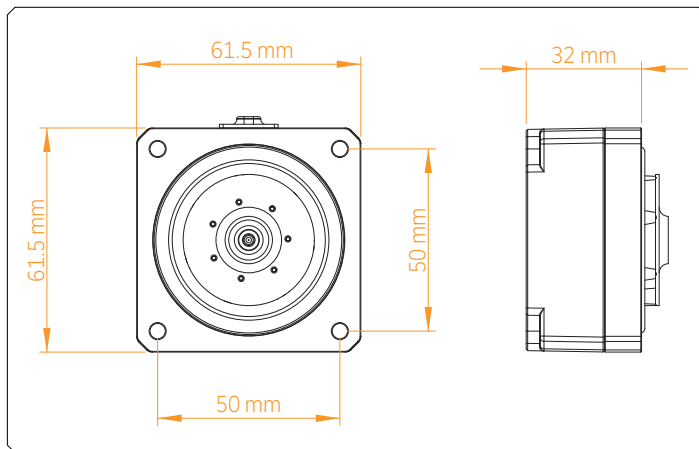

TECHNICAL SPECIFICATIONS

Maximum Fan and Radiator Compatibility:

- Motor: Electronically commuted spherical motor
- Rated voltage: 12V DC
- Power consumption: 18W
- Maximum pressure head: 5.3m
- Maximum flow: 1100L/h
- Maximum system temperature: 60°C
- Materials: NORYL GFN2, EPDM O-rings, Copper Coils, Stainless Steel Shaft, Graphite Bushing
- Power connector: 4-Pin Molex and 4-Pin PWM FAN connector


Operational regime:

- PWM duty cycle: ~ 11-100%
- Default behavior: Runs at 100% duty cycle when no PWM feedback signal is present

COMPATIBILITY

EK-VTX pumps can be used with all FLT reservoirs and REFLECTION distribution plates compatible with DDC pumps, providing an alternative option.


PUMP INSTALLATION

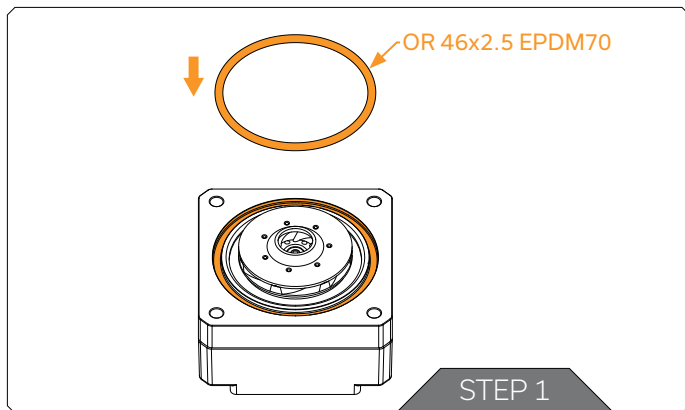

If you have already filled your loop with coolant, you will need to drain it before installing the EK-VTX Pump.

STEP 1

Insert the O-Ring into a Pump groove.


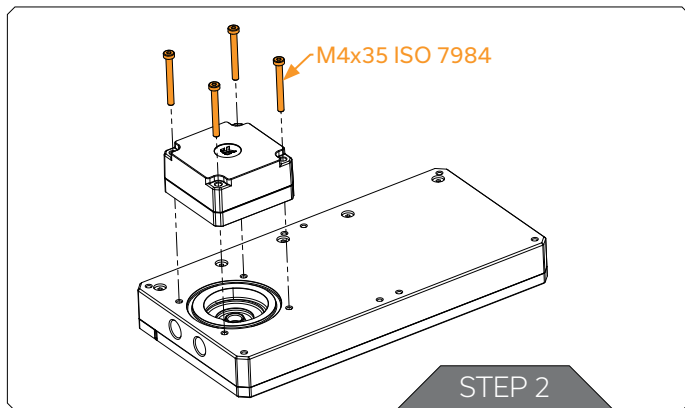


STEP 2


Install the EK-VTX Pump using four (4) M4x35 ISO 7984 screws. Position the pump onto the reservoir. Make sure all the holes are aligned. Tighten the screws evenly.

Before attaching the EK-VTX Pump, make sure the O-Ring is placed correctly! Do not use excessive force!

For this step you will need:

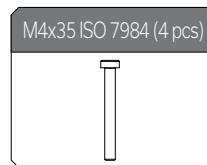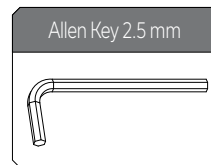

CONNECTING THE PUMP

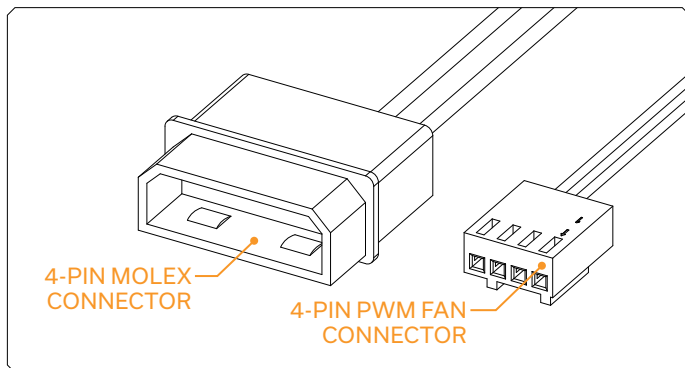

The EK-VTX Pump has two connectors:

1. **4-Pin Molex** – must be connected directly to your PSU at all times as it is used to power the pump;
2. **4-pin PWM Fan** – can be connected to your motherboard CPU Fan or designated water pump header. It can also be connected to a controller. This cable is used to control and report the rotational speed of the pump. If it's not connected, the pump will run at maximum speed (100% PWM).

TESTING THE LOOP

To make sure the installation of EK components was successful, we recommend you perform a leak test for 24 hours.

When your loop is complete and filled with coolant, connect the pump to a PSU outside of your system. **Do not connect the power to any other components!**

Turn on the PSU and let the pump run continuously. It is normal for the coolant level to drop during this process as air collects in the reservoir.

Inspect all the parts of the loop, and in the case of coolant leaks, fix the issue and repeat the testing process. Ensure that all hardware is dry before the system is powered on in order to prevent any damage.

SUPPORT AND SERVICE


In case you need assistance or wish to order spare parts or a new mounting mechanism, please contact:

<https://www.ekwb.com/customer-support/>

EKWB d.o.o.
Pod lipami 18
1218 Komenda
Slovenia - EU

SOCIAL MEDIA

 EKWaterBlocks

 @EKWaterBlocks

 ekwaterblocks

 EKWBofficial

 ekwaterblocks

